



MODEL FL4000H

Multi-Spectral Infrared
Flame Detector



The information and technical data disclosed in this document may be used and disseminated only for the purposes and to the extent specifically authorized in writing by General Monitors.

Instruction Manual **7-16**

General Monitors reserves the right to change published specifications and designs without prior notice.



Part No.
Revision

MANFL4000NH
N/7-16

This page intentionally left blank

Table of Contents

| | |
|---|------------|
| MODEL FL4000H | 1 |
| MULTI-SPECTRAL INFRARED..... | 1 |
| FLAME DETECTOR..... | 1 |
| TABLE OF FIGURES..... | V |
| TABLE OF TABLES..... | VI |
| QUICK START GUIDE | VII |
| Mounting and Wiring the Detector | vii |
| Applying Power to the Detector | ix |
| Testing the Detector Using a Test Lamp | x |
| ABOUT THIS MANUAL | X |
| Format Conventions..... | x |
| Other Sources of Help..... | x |
| 1.0 BEFORE INSTALLATION..... | 11 |
| 1.1 System Integrity Verification | 11 |
| 1.2 Commissioning Safety Systems | 11 |
| 1.3 Special Warnings | 11 |
| 1.4 Glossary of Terms..... | 12 |
| 2.0 PRODUCT OVERVIEW | 14 |
| 2.1 General Description | 14 |
| 2.2 Features and Benefits | 14 |
| 2.3 Applications..... | 15 |
| 2.4 Principle of Operation..... | 15 |
| 3.0 INSTALLATION..... | 21 |
| 3.1 Unpacking the Equipment..... | 21 |
| 3.2 Required Tools..... | 21 |
| 3.3 Detector Location Guidelines..... | 22 |
| 3.4 Field Wiring Procedure | 26 |
| 3.5 Detector Mounting and Installation | 27 |
| 3.6 Terminal Connections | 29 |
| 3.7 Switch Selectable Options | 36 |
| 3.8 Powering of the FL4000H | 38 |
| 3.9 Power up Grounding of the Test and Relay Reset Lines..... | 38 |
| 4.0 MODBUS INTERFACE | 39 |
| 4.1 Introduction | 39 |
| 4.2 Communication Slave Address..... | 39 |

| | | |
|------------|--|-----------|
| 4.3 | Baud Rate | 39 |
| 4.4 | Data Format | 39 |
| 4.5 | Supported Function Codes | 40 |
| 4.6 | Modbus Read Status Protocol (Query / Response)..... | 40 |
| 4.7 | Modbus Write Command Protocol (Query / Response) | 41 |
| 4.8 | Exception Responses and Exception Codes | 41 |
| 4.9 | Command Register Locations..... | 43 |
| 4.10 | Command Register Details | 47 |
| 5.0 | MAINTENANCE | 58 |
| 5.1 | General Maintenance..... | 58 |
| 5.2 | Cleaning the Sapphire Window..... | 58 |
| 5.3 | Sensitivity Check..... | 59 |
| 5.4 | Storage..... | 59 |
| 6.0 | TROUBLESHOOTING..... | 60 |
| 6.1 | Troubleshooting Chart | 60 |
| 6.2 | Final Assembly | 61 |
| 7.0 | CUSTOMER SUPPORT | 62 |
| 7.1 | Other Sources of Help | 62 |
| 8.0 | APPENDIX..... | 63 |
| 8.1 | Warranty..... | 63 |
| 8.2 | Specifications | 63 |
| 8.3 | Regulatory Information..... | 65 |
| 8.4 | Response to False Stimuli | 66 |
| 8.5 | Spare Parts and Accessories..... | 67 |
| 9.0 | APPENDIX A | 70 |

Table of Figures

| | |
|--|------|
| Figure 1: FL4000H Housing | vii |
| Figure 2: Mounting Instruction | viii |
| Figure 3: Wall Mounting Assembly | viii |
| Figure 4: Bracket Assembly | ix |
| Figure 5: Field Terminations Showing Wiring for Fire Alarm Systems | ix |
| Figure 6: FL4000H Front View | 14 |
| Figure 7: Test Lamp Flashing Option (Auto-detection) | 19 |
| Figure 8: Grounding of Test Wire or Modbus Command Options | 20 |
| Figure 9: Horizontal FOV – <i>n</i> -Heptane – High Sensitivity. | 23 |
| Figure 10: Horizontal FOV – <i>n</i> -Heptane – Medium Sensitivity | 23 |
| Figure 11: Horizontal FOV – <i>n</i> -Heptane – Low Sensitivity. | 24 |
| Figure 12: Vertical FOV – <i>n</i> -Heptane – High Sensitivity. | 24 |
| Figure 13: Vertical FOV – <i>n</i> -Heptane – Medium Sensitivity. | 25 |
| Figure 14: Vertical FOV – <i>n</i> -Heptane – Low Sensitivity. | 25 |
| Figure 15: FL4000H Housing | 26 |
| Figure 16: Detector Mounting and Installation | 28 |
| Figure 17: Dimensional Drawing | 29 |
| Figure 18: Wire-Strip Lengths | 29 |
| Figure 19: Base Housing and Terminal Blocks | 30 |
| Figure 20: Terminal Connections | 31 |
| Figure 21: Relay Contacts | 32 |
| Figure 22: Wiring Diagram – Reset Relays, Test Mode, & Alarm Test | 34 |
| Figure 23: Dipswitch Location | 37 |
| Figure 24: Command Register | 49 |
| Figure 25: Optical Parts to Clean | 58 |
| Figure 26: FL4000H Cross-Section View | 61 |
| Figure 27: Rain Guard Installation | 69 |
| Figure 28: Functional Board Located Under TL105 Lamp Assembly | 70 |

Table of Tables

| | |
|--|----|
| Table 1: Glossary of Terms | 12 |
| Table 2: Sample Industry Applications | 15 |
| Table 3: LED sequence for each operating condition | 16 |
| Table 4: Required Tools | 21 |
| Table 5: Maximum Specified Fields of View at High Sensitivity | 22 |
| Table 6: Sensitivity Settings for <i>n</i> -Heptane | 25 |
| Table 7: Terminal Block Connections | 30 |
| Table 8: Alarm Relay Terminals | 31 |
| Table 9: Warning Relay Terminals | 32 |
| Table 10: Fault Relay Terminals | 33 |
| Table 11: Alarm Reset Terminal | 33 |
| Table 12: Test Mode Terminal | 33 |
| Table 13: Alarm Test Terminals | 34 |
| Table 14: Analog Output Terminal | 34 |
| Table 15: Analog Output Levels | 35 |
| Table 16: Maximum Cable Lengths for 250 Ω Inputs | 35 |
| Table 17: Power Terminals | 35 |
| Table 18: Maximum Cable Lengths for +24 VDC | 35 |
| Table 19: Modbus Terminals | 36 |
| Table 20: Chassis Ground Terminal | 36 |
| Table 21: Dipswitch Options | 37 |
| Table 22: Selectable Baud Rates | 39 |
| Table 23: Selectable Data Formats | 39 |
| Table 24: Modbus Read Register(s) Request | 40 |
| Table 25: Modbus Read Register(s) Response | 40 |
| Table 26: Modbus Write Register Request | 41 |
| Table 27: Modbus Write Register Response | 41 |
| Table 28: Exception Response | 42 |
| Table 29: Exception Codes | 42 |
| Table 30: Command Register Locations | 43 |
| Table 31: Status Mode Values | 47 |
| Table 32: Modbus Error Codes | 48 |
| Table 33: Com1 Baud Rate | 50 |
| Table 34: Selectable Data Formats | 50 |
| Table 35: Event Log Clock Time Format | 54 |
| Table 36: Troubleshooting Chart | 60 |
| Table 37: Locations | 62 |
| Table 38: False Alarm Immunity at High Sensitivity | 66 |
| Table 39: Flame Response in the Presence of False Alarm Sources (High Sensitivity) | 67 |
| Table 40: List of Spare Parts | 68 |

Quick Start Guide

Mounting and Wiring the Detector

Pay special attention to the conduit seal entry (Canadian Electrical Code Handbook Part 1, Section 18-154). Mount the detector by using the swivel mount or mounting bracket hardware.

The following procedure should be used in conjunction with the housing diagram below to disassemble the Optical Housing Assy for wiring:

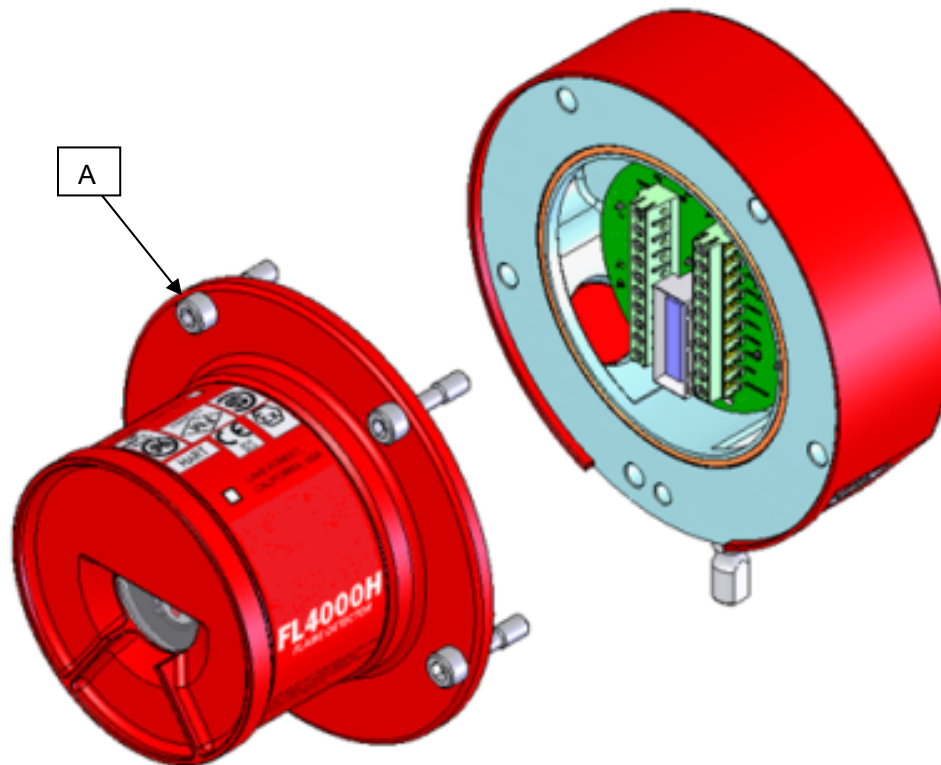


Figure 1: FL4000H Housing

1. Loosen the captive screws (A) located on the Optical Housing Assy.
2. Pull the Optical Housing Assy from the Base Housing Assy to separate, gently rock from side to side if necessary to loosen the connector's grip.
3. Wire the unit to the site-wiring following the connection diagram shown in Figure 5.
4. Reassemble the unit using steps 1 thru 2 in reverse.



CAUTION: Do not unscrew the field wiring board from the base housing assembly for wiring.

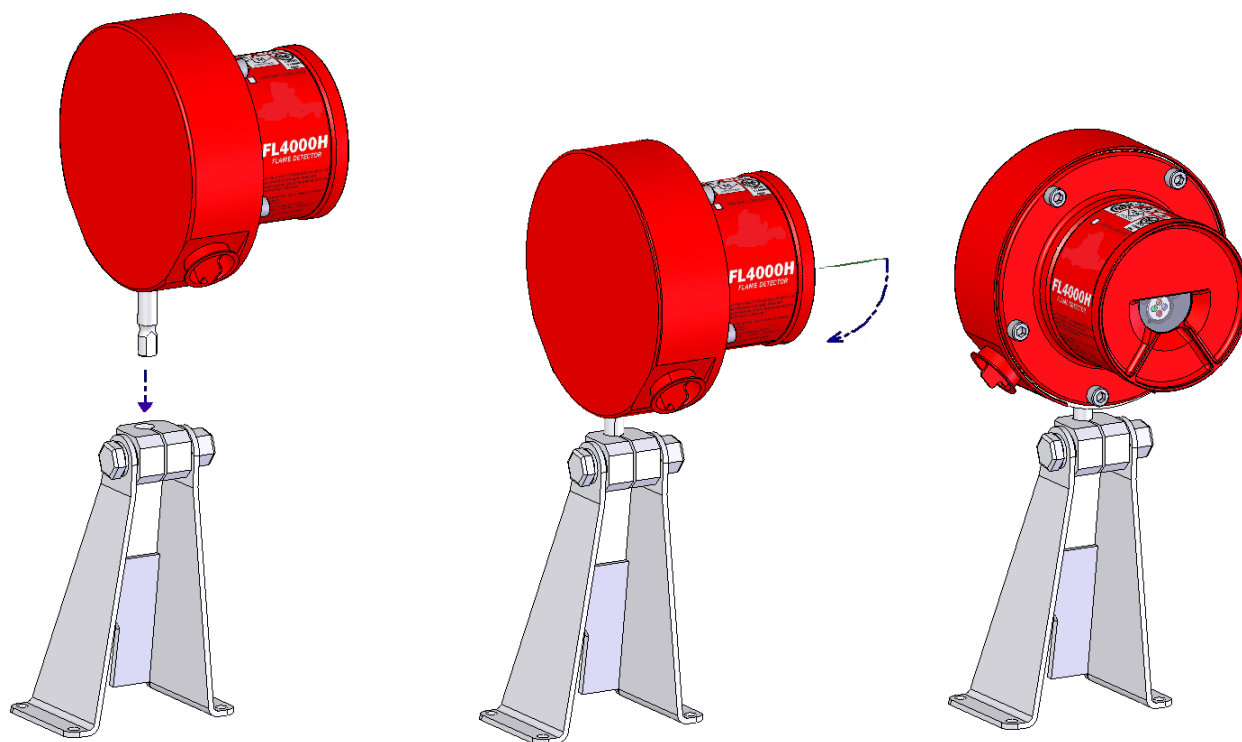


Figure 2: Mounting Instruction

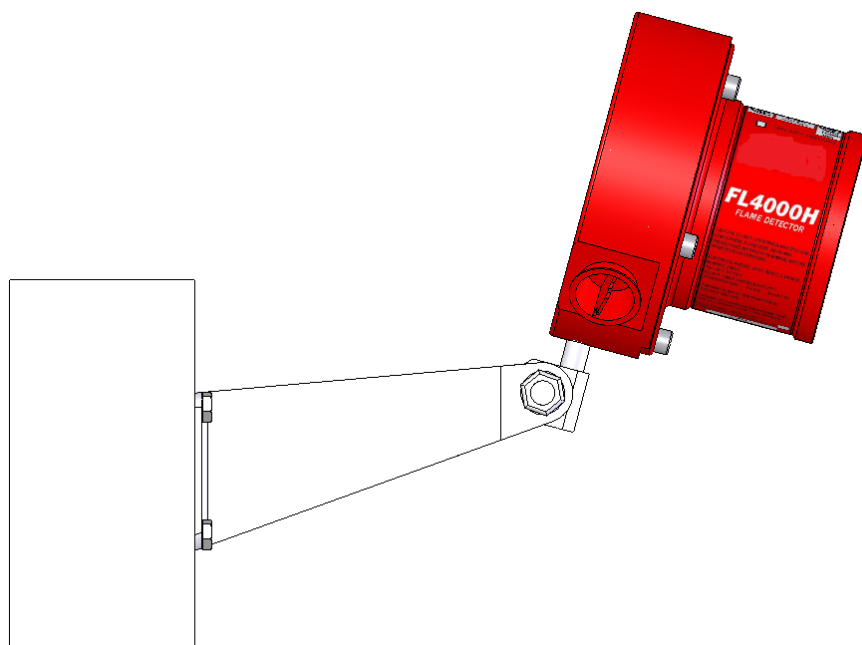


Figure 3: Wall Mounting Assembly

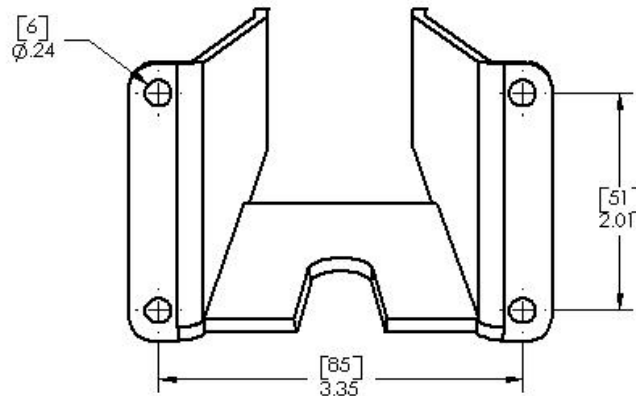


Figure 4: Bracket Assembly

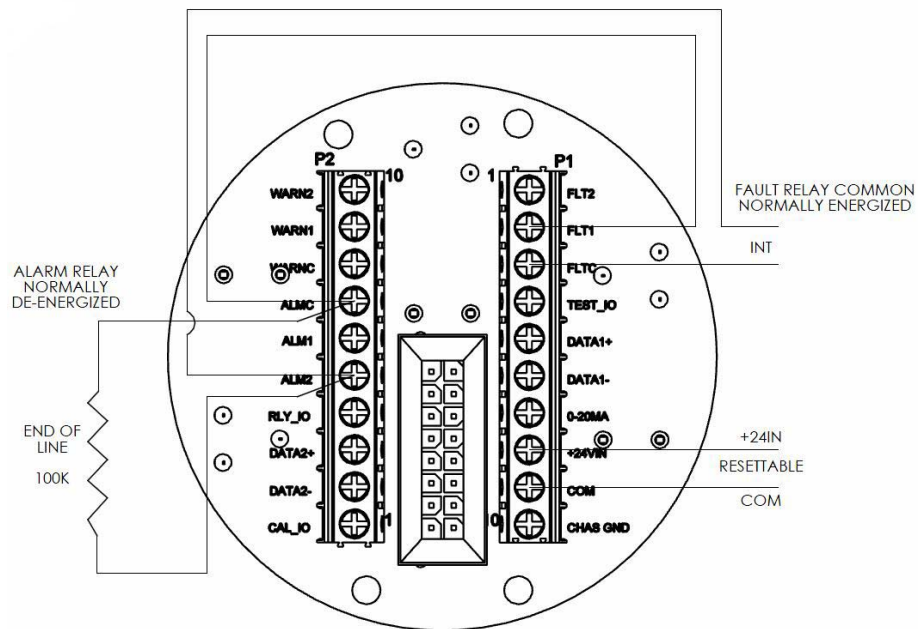


Figure 5: Field Terminations Showing Wiring for Fire Alarm Systems¹

Applying Power to the Detector

Two light emitting diodes (LED's) are visible through the window. Immediately upon powering up the detector, both LED's will start blinking alternately for 15 seconds. The unit will then enter the "Ready" mode. During the "Ready" mode, the green LED will flash off 0.5 seconds every 5 seconds.

¹ Recommended by Underwriters' Laboratories of Canada.

Testing the Detector Using a Test Lamp

Test the integrity of your system by using a Test Lamp. The original configuration (i.e. sensitivity and relay options) can be changed by referring to Section 3.7 , and then changing the dipswitch settings located on the bottom of the power board (SW1).

The instrument is now ready to operate. Please consult the Test Lamp manual for more information on the instrument's many features. If you have any problems in the set-up or testing of the detector, please refer to the "Trouble Shooting Section", or call the factory direct.

About This Manual

This manual provides instructions for installing, operating, and maintaining the General Monitors (GM) FL4000H Flame Detector. The intended audience includes installation personnel, field service technicians, Modbus programmers, and other technical staff involved in installing and using an FL4000H.

Format Conventions

Several format conventions are used throughout this manual for Notes, Cautions, Warnings, User Menus, and Modbus notations. These conventions are described below.

Notes, Cautions, and Warnings

NOTE: Notes provide supplementary details such as exception conditions, alternate methods for a task, time saving tips, and references to related information.



CAUTION: These notices describe precautions to prevent hazardous conditions that may damage the equipment.



WARNING: These notices describe precautions to prevent hazardous conditions that may cause injury to people working with the equipment.

Modbus Register Formats

Hexadecimal numbers are used in Modbus registers and are indicated by the addition of either "0x" in front of a number or "h" after the number (example: 0x000E or 000Eh, respectively).

Other Sources of Help

General Monitors provides extensive documentation, white papers, and product literature for the company's complete line of safety products, many of which can be used in combination with the FL4000H. Many of these documents are available online at <http://www.MSAafety.com/detection>.

Contacting Customer Support

For additional product information not contained in this manual, please contact General Monitors Customer Support. Refer to Section 7.0 for contact information.

1.0 Before Installation

1.1 System Integrity Verification

General Monitors' mission is to benefit society by providing safety solutions through industry leading products, services, and systems that save lives and protect capital resources from the dangers of hazardous flames, gases, and vapors.

General Monitors' safety products should be handled carefully and installed, calibrated, and maintained in accordance with the individual product instruction manuals. To ensure operation at optimum performance, General Monitors recommends that prescribed maintenance procedures be followed.

1.2 Commissioning Safety Systems

Before power up, verify wiring, terminal connections, and stability of the mountings for all essential safety equipment including, but not limited to:

- Power supplies
- Control modules
- Field detection devices
- Signaling / output devices
- Accessories connected to field and signaling devices

After the initial power up and any factory specified warm-up period of the safety system, verify that all signal outputs, to and from the devices and modules, are within the manufacturer's specifications. Initial calibration / calibration checking / testing should be performed according to the manufacturer's recommendations and instructions.

Proper system operation should be verified by performing a full, functional test of all component devices of the safety system, ensuring that the proper alarm levels occur. Fault / Malfunction circuit operations should be verified.

1.3 Special Warnings



WARNING: Toxic, combustible, and flammable gases and vapors are dangerous. Extreme caution should be used when these hazards are present.



CAUTION: Keep cover tight while circuits are alive.

CAUTION: Do not open when an explosive atmosphere is present.

Through engineering design, testing, manufacturing techniques, and rigid quality control, General Monitors supplies the finest flame detection systems available. The user must recognize his responsibility for maintaining the flame detection system in operational condition.

The FL4000H contains components that can be damaged by static electricity. In order to avoid static electricity, special care must be taken when wiring the system to ensure that only the connection points are touched.

The FL4000H is rated Explosion Proof (XP) for use in hazardous locations.

Conduit seals or suitably approved Ex d glands must be used to preserve the explosion proof safety of the FL4000H and help prevent ingress of water or gas from the conduit systems. A conduit seal must be installed within 18 inches of the enclosure per NEC regulations.

Silicone Room Temperature Vulcanization (RTV) is not an approved moisture barrier. If used, damage to internal components will arise.

Damage to the FL4000H housing where any internal components or protective seals are broken, compromises the safety and usability of the device. An FL4000H with a damaged or open housing should not be used in a hazardous environment. Such damage includes fractures in the housing, cracks in any internal components, or cracks in the protective seals.

1.4 Glossary of Terms

Table 1: Glossary of Terms

| Term / Abbreviation | Definition |
|-------------------------|---|
| A | Amps |
| AC | Alternating Current |
| ANN | Artificial Neural Network |
| AWG | American Wire Gauge |
| Baud Rate | The number of signal level changes per second in a line, regardless of the information content of those signals |
| bps | Bits per second |
| Cable Armor | Cable having interlocked or corrugated armor where it is essential to provide positive grounding of cable armor |
| Cable Screen | Mesh surrounding a cable |
| COM | DC Ground |
| COPM | Continuous Optical Path Monitoring |
| CR | Control Room |
| CRC | Cycle Redundancy Check |
| DC | Direct Current |
| DCS | Distributed Control System |
| De-Energized | To disconnect from a power source |
| DSP | Digital Signal Processor |
| EEPROM | Electrically Erasable Programmable Read-Only Memory |
| EMI | Electromagnetic Interference |
| ENERGIZED | To apply voltage or energy |
| FOV | Field of View |
| FS | Full Scale |
| GM | General Monitors |
| HART | Highway Addressable Remote Transducer-communication protocol |
| Hex | Hexadecimal Number |
| I / O | Input / Output |
| Instrument Earth | Grounded using a grounding strap |
| Latching | Refers to relays remaining in the “on” state even after the “on” condition has been removed |
| LED | Light Emitting Diode |
| LSB | Least Significant Bit |
| mA | Milli-Amps refers to 1/1000 of an Amp |
| Master | Controls one or more devices or processes |
| Modbus | Master-slave messaging structure |
| N/A | Not Applicable |
| NC | Normally Closed |
| NO | Normally Open |

| Term / Abbreviation | Definition |
|---------------------|---|
| Non-Latching | Refers to relays being reset to the initial state after “on” condition has been removed |
| NPT | National Pipe Thread |
| OV Return | Over voltage return |
| 0VDC | Power Supply Common Ground |
| Oxidation | Combining with Oxygen |
| PCB | Printed Circuit Board |
| PLC | Programmable Logic Controller |
| ppm | Parts per million |
| RFI | Radio Frequency Interference |
| RMS | Root-Mean-Square |
| ROM | Read Only Memory |
| RTV | Room Temperature Vulcanization |
| Safety Earth | Grounded to the earth |
| Slave | One or more devices or processes controlled by a master controller |
| SMT | Surface Mount Technology |
| SPAN Value | The programmed range of measurable parts per million |
| SPDT | Single Pole, Double Throw |
| SPST | Single Pole, Single Throw |
| TB | Terminal Block |
| V | Volts |
| VAC | Volts Alternating Current |
| VDC | Volts Direct Current |
| XP | Explosion Proof |

2.0 Product Overview

2.1 General Description

The General Monitors' FL4000H is a Multi-Spectral Infrared (MSIR) Flame Detector (Figure 6). The FL4000H employs state-of-the-art infrared (IR) detectors and a sophisticated *artificial neural network* (ANN) based signal processing to produce a system that is highly immune to false alarms caused by lightning, sunlight reflection, arc-welding, hot objects, and other sources of radiation. In addition, the FL4000H can see through most smoky type fires such as diesel, rubber, etc.

The FL4000H is certified as explosion proof for use in hazardous locations (Section 8.3.2). It can also be used for general-purpose, non-hazardous applications.

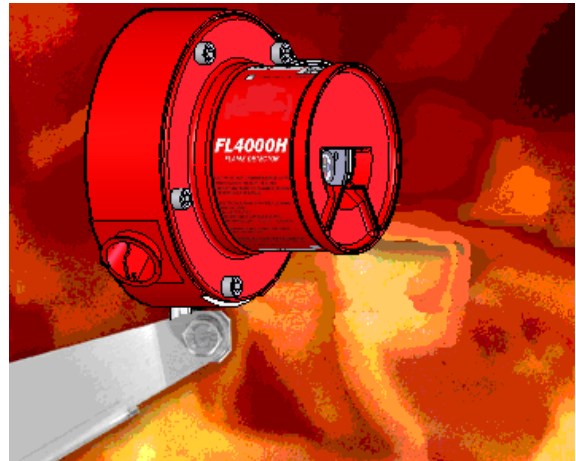


Figure 6: FL4000H Front View

2.2 Features and Benefits

High False Alarm Immunity: Provides reliable flame detection performance by utilizing a proprietary ANN processing algorithm to minimize false alarms. Please refer to Sec. 8.4 for more details on the behavior of the instrument in the presence of false stimuli.

Wide Field of View (FOV): Encompasses a larger area of detection with uniform sensing and no blind spots.

Modular Design: Results in low maintenance and reduced total cost of ownership.

Compact Unitized Design: Enhances ease of installation and maintenance.

Continuous Optical Path Monitoring (COPM): Regularly monitors the optical path to ensure the window is not dirty.

0-20 mA Analog Output: Transmits alarm and fault indication to a remote display, computer, or other device such as an alarm, dispensing device, or master controller.

Dual Redundant Modbus RS-485 User Interface (Standard FL4000H Configuration): Provides the capability to operate the FL4000H remotely, using 2 redundant channels. This interface allows the user to remotely change the alarm and warning relay settings, clear selected faults, clear error counters, change baud rates, and change formats for serial communication lines.

HART Protocol² (Optional HART Configuration): The HART equipped FL4000H supports the HART communication protocol version 6. Using this protocol, users can transmit diagnostics, settings, and other device status information that improves the efficiency of remote communication.

NOTE: FL4000H HART should not be used with General Monitors TA402A and FL802 Controllers.

² HART® is a registered trademark of the HART Communication Foundation

2.3 Applications

The FL4000H provides flame detection for a wide range of applications, including, but not limited to the following:

Table 2: Sample Industry Applications

| Industries | Sample Applications |
|---------------------|---------------------------------|
| Oil and Gas | On and Offshore Platforms |
| Gas Pipelines | Compressor Buildings |
| Airports / Military | Airplane Hangars |
| Gas Turbines | Turbine Enclosures |
| Chemical Plants | Process Buildings |
| Loading Terminals | Trucking On / Off Loading Areas |
| Petrochemical | Process Areas |
| Refineries | Tank Farms and Process Areas |

2.4 Principle of Operation

The FL4000H is a discriminating multi-spectral infrared detector, which makes use of infrared sensors for different IR wavelengths and characteristics. This combination provides a flame detection system, which is highly immune to false alarms.

The ANN network classifies the output signals from the detector as either fire or no-fire. The unit then produces the following output signals:

- 0 to 20 mA signal (3.5 or 1.25 to 20 mA with optional HART protocol)
- Immediate WARN relay contacts
- Time delayed ALARM relay contacts
- FAULT relay contacts
- RS-485 Modbus output
- Redundant RS-485 Modbus output

(Refer to Section 3.0 and Section 4.0 for more information on detector outputs.)

2.4.1 Visual Indicators

Two light emitting diodes (LEDs) are visible on the front detector window. These LEDs provide a visual indication that corresponds with the detector's outputs. The following LED flashing sequences indicate various operating conditions:

Table 3: LED sequence for each operating condition.

| # | State | Red | Green | Notes |
|---|---|---------------------------|---------------------------|---------------------------------------|
| 1 | Power up | 0.5 sec On | 0.5 sec On | Alternating for 15 seconds |
| 2 | Ready | Off | 5 sec On 0.5 sec Off | |
| 3 | Warning | 0.5 sec On 0.5 sec Off | Off | |
| 4 | Alarm | 0.2 sec On 0.2 sec Off | Off | |
| 5 | COPM Fault | Off | 0.5 sec On 0.5 sec Off | |
| 6 | Low Voltage, Code or Data, Checksum Fault | Off | 0.2 sec On 0.2 sec Off | |
| 7 | Test Mode Activated | Off | 0.9 sec On 0.1sec Off | |
| 8 | Test Mode Warning | 0.5 sec On | 0.5 sec On | Alternating while detecting Test Lamp |
| 9 | Test Mode Alarm | 0.2 sec On | 0.2 sec On | Alternating while detecting Test Lamp |

2.4.2 Continuous Optical Path Monitoring - COPM Circuitry

A self-testing feature called Continuous Optical Path Monitoring (COPM) checks the optical path, the detector(s), and the related electronic circuitry once every 2 minutes. If foreign material on the front surface of the FL4000H blocks the COPM light from reaching the detector(s) for four minutes, the unit will indicate FAULT. The optical FAULT outputs are a 2.0 mA (3.5 mA with HART and small HART current disabled) signal, de-energizing of the FAULT relay, and Modbus (RS-485) output signal. After a COPM FAULT, a COPM check is performed every twenty seconds. The COPM will resume a once per 2-minute check only after the obstruction is removed.



CAUTION: Dirty or partially blocked windows can significantly reduce the detector's field of view and detection distance.

NOTE: Because the optical path is checked once every 2 minutes and requires two check failures to produce a FAULT, it may take up to 4 minutes for the unit to detect an obstruction.

2.4.3 Test Mode Initiation

NOTE: The FL4000H will not detect a flame while in Test Mode.

The FL4000H has the ability to initiate a special Test Mode, which enables the user to test the response of the unit without the use of a flame source. Once the Test Mode has been activated, the unit will not detect a flame, but rather, responds to GM's Test Lamp as a simulated flame source.

There are four options for enabling Test Mode on the FL4000H:

1. Flashing of the Test Lamp
2. Momentary grounding of test wire³
3. Modbus command
4. HART command (available in HART configuration only)

³ Underwriters' Laboratories of Canada (ULC) does not sanction the grounding of test wire as an approach for enabling Test Mode. For ULC-approved systems, only Test Lamp and HART and Modbus commands may be used.

Each time the Test Mode is activated and the Test Lamp is successfully detected, regardless of which option is used, the FL4000H maintains a timestamp of the test. This timestamp is available to the user via Modbus registers 0x6A, 0x6B, and 0x6C.

2.4.3.1 Test Mode Initiation via Test Lamp

NOTE: The Test Lamp sequence is depicted in Figure 7.

When the unit is in Operational Mode, the FL4000H recognizes the Test Lamp as a trigger to activate the Test Mode. Within 5-8 seconds of the Test Lamp flashing, the FL4000H will detect the simulated flame source, drop the analog output to 1.5 mA (3.5 mA with HART and small HART current disabled), and change the LED flashing to indicate “Test Mode Activated” shown in sequence #7 of **Table 3**. The relay setting will remain at “Ready” during this operation.

Further continuous flashing of the Test Lamp in Test Mode enables the following sequence of events:

- After 2 seconds in Test Mode (Phase 2), the FL4000H indicates a Warning condition, by setting the analog output to 16 mA, changing the LED flashing to indicate “Test Mode Running” shown in sequence #8 (**Table 3**), and setting the relay to Warning State.
- After a user-selectable time delay of 0-30⁴ seconds (Phase 3), the FL4000H displays an Alarm condition by setting the analog output to 20 mA, and setting the relay to Alarm State. The LED sequence changes to sequence #9 (**Table 3**) “Warning” mode.
- After 4.25 minutes in Alarm mode (Phase 4), the unit will return to Ready Mode by dropping the analog output to 4.3 mA, restoring the LED flashing to “Ready” shown in sequence #2 (**Table 3**), and setting the relay to Ready State. The FL4000H has now returned to flame detection status.

NOTE: After the test is initiated via the Test Lamp, all other commands are ignored until the Test Mode is over. While in Test Mode, the unit will not detect flames. Interruption of the Test Lamp flashing for more than 3 seconds will result in termination of the test sequence and a return to Ready Mode (Phase 0).

If a relay is latched, it must be manually reset via the reset relays line or a Modbus command. There is a 10 second restart delay. After the unit returns to Ready State from Phase 4, the unit waits for 10 seconds before a subsequent Test Lamp transition back to Phase 1.

2.4.3.2 Test Mode Initiation via Grounding of Test Wire or Modbus Command

NOTE: Both grounding of the test wire and Modbus command sequence are depicted in Figure 8.

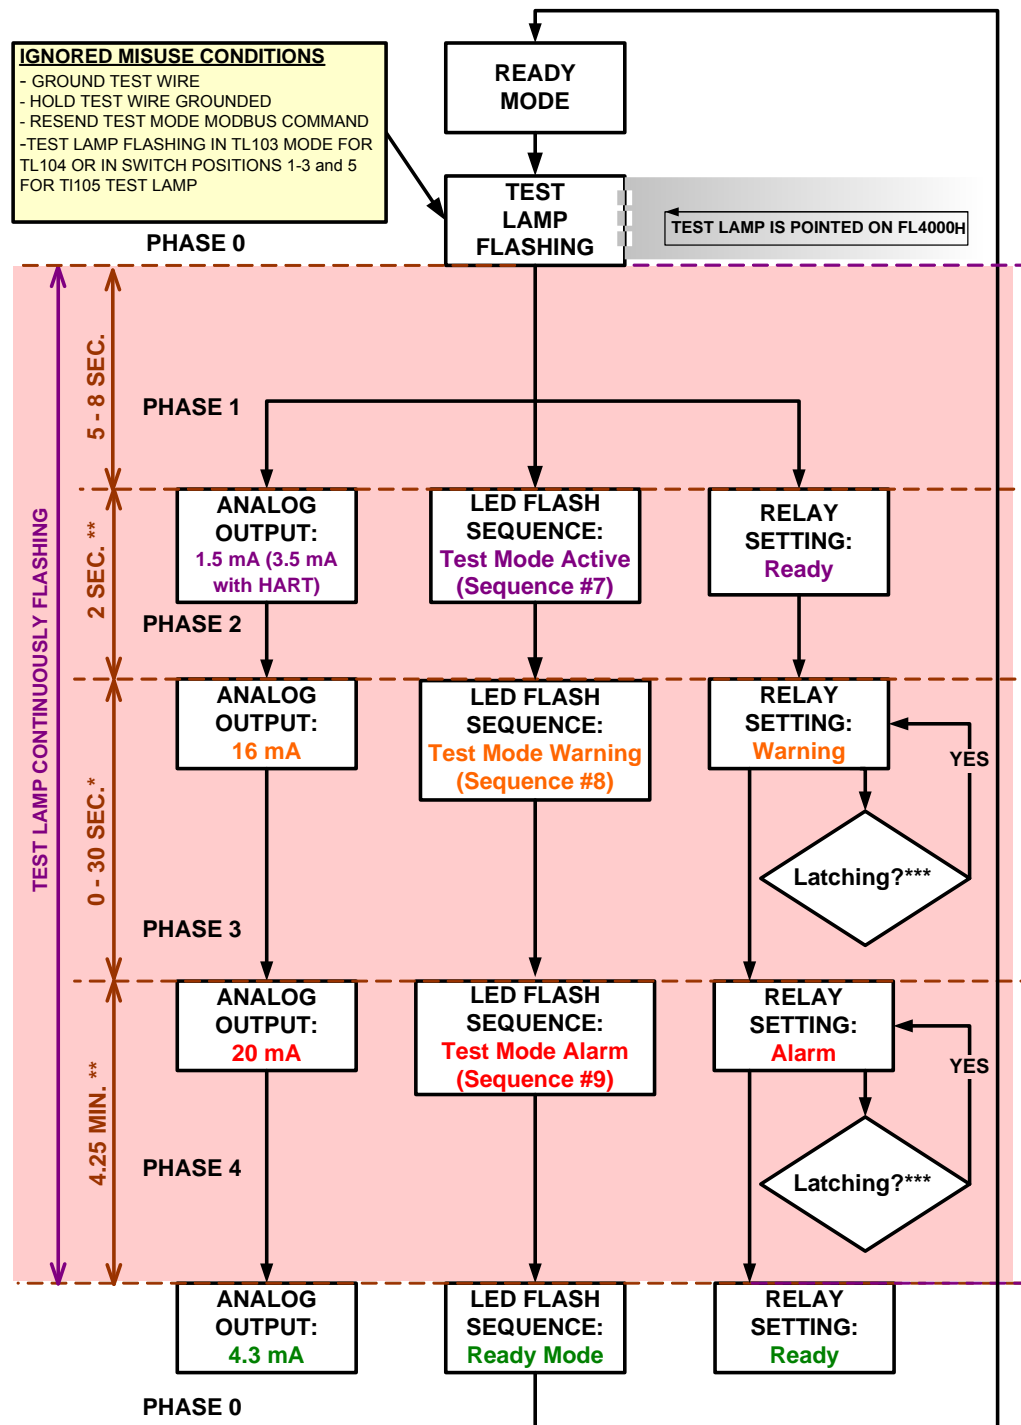
Momentary grounding of a test wire or the Modbus test-mode-enable command causes the FL4000H to enter Test Mode. Initiation of Test Mode is indicated by the analog output dropping to 1.5 mA (3.5 mA with HART and small HART current disabled) and LED flashing in sequence # 7 (**Table 3**). The Test Lamp is not needed to enable Test Mode. If the Test Lamp is not used in Test Mode, the Test Mode times out in 3 minutes.

Flashing of the Test Lamp in the Test Mode enabled via test wire or Modbus results in the following sequence of events:

⁴ Time delay can be set through Modbus to any value between 0 and 30 seconds, and via dipswitch to 0, 8, 10, or 14 seconds.

- After 5-8 seconds of the Test Lamp flashing in Phase 3, the FL4000H goes into Phase 4, indicating 1.5 mA (3.5 mA with HART and small HART current disabled) at the analog output, changing the LED flashing to indicate “Test Mode Running” shown in sequence #8 (**Table 3**)
- After 4.25 minutes in Phase 4, the FL4000H returns to Ready Mode, indicating 4.3 mA at the analog output, restoring the LED flashing to “Ready” shown in sequence #2 (**Table 3**).

NOTE: After the test is initiated via wire or Modbus; all other commands are ignored until the Test Mode is over. While in Test Mode, the unit will not detect flames. Interruption of the Test Lamp flashing for more than 3 seconds will result in termination of the test sequence and a return to Ready Mode (Phase 0).




* USER SETTING VIA DIP SWITCH (0, 8, 10, OR 14 SEC) OR MODBUS (0 - 30 SEC)

** FACTORY PROGRAMMABLE

*** IF RELAY IS LATCHED DURING THE TEST MODE, IT MUST BE MANUALLY RESET VIA RESET RELAYS LINE OR MODBUS COMMAND

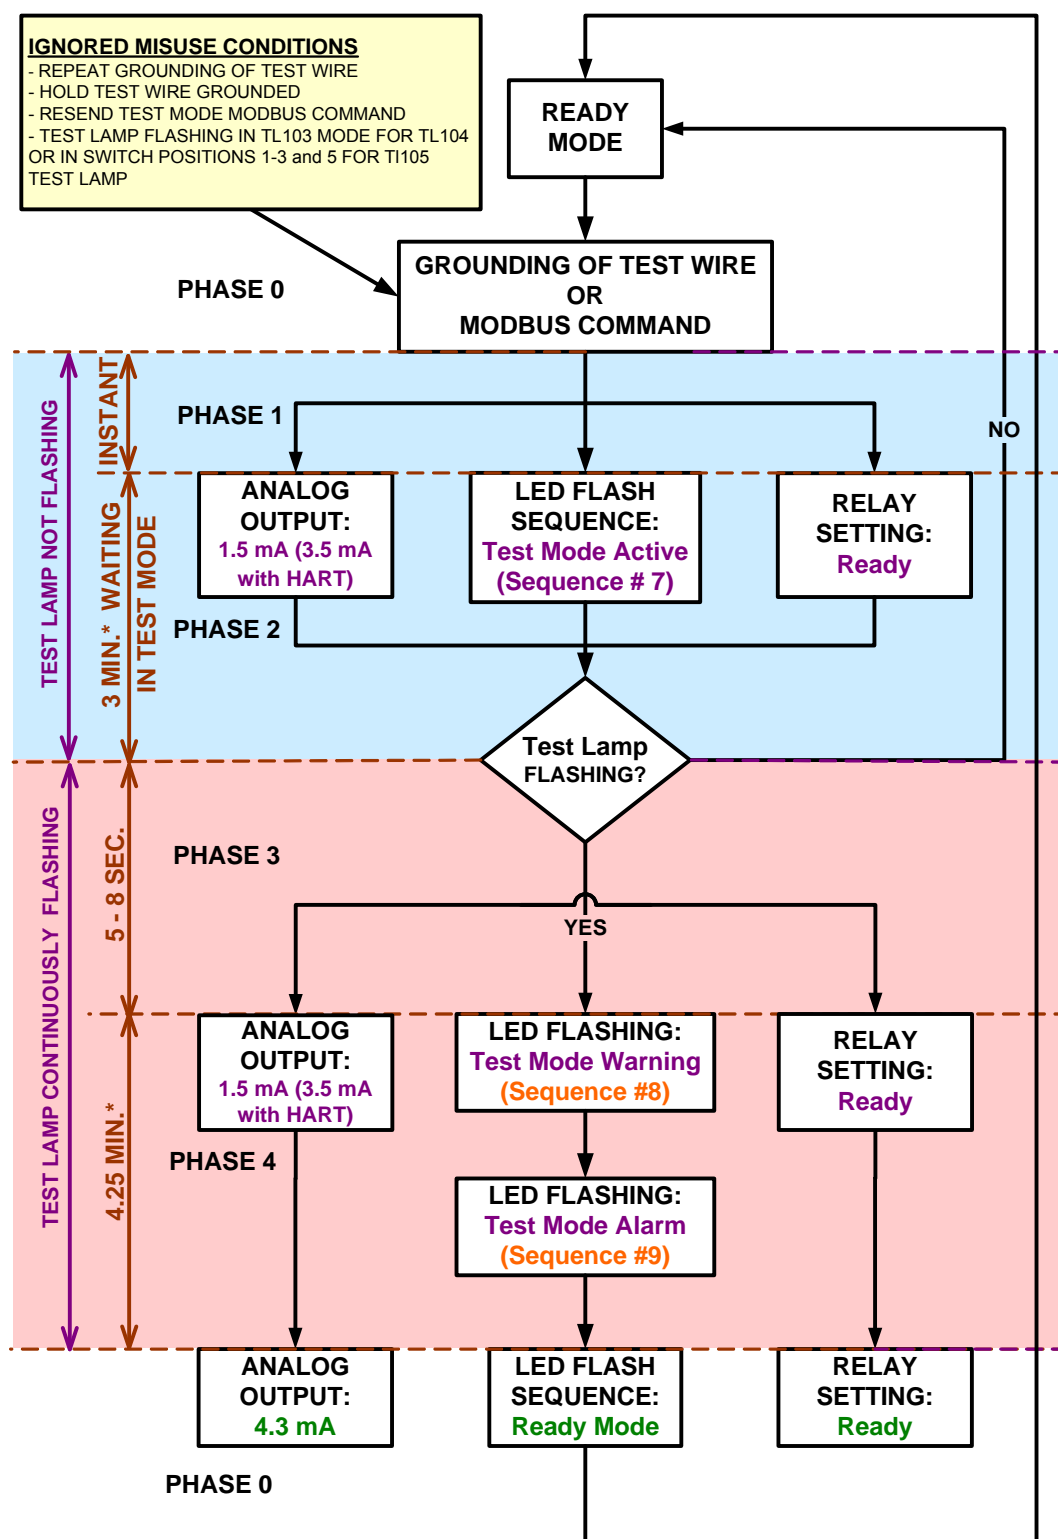Figure 7: Test Lamp Flashing Option (Auto-detection)



* FACTORY PROGRAMMABLE

Figure 8: Grounding of Test Wire or Modbus Command Options

3.0 Installation



CAUTION: The FL4000H contains components that can be damaged by static electricity. Always wear grounding apparel when handling or installing the unit.

NOTE: Only personnel trained and qualified in the HART communication protocol may install and use the HART configuration of the FL4000H detector.

NOTE: Only trained and authorized users can configure the FL4000H.

NOTE: The FL4000H flame detector is to be installed in accordance with NFPA 72 requirements.

The basic steps in a typical installation are listed in the sections below. The installation process may vary depending on the exact site configuration.

NOTE: When used with ULC-listed fire alarm control units equipped with 4-wire smoke detector circuits, the FL4000H should be reset by temporarily removing the supply voltage for at least 70 ms with a decline of operation voltage of no less than 3 VDC.

3.1 Unpacking the Equipment

All equipment shipped by General Monitors is packaged in shock absorbing containers that protect against physical damage. The contents should be carefully removed and checked against the enclosed packing list.

If any damage has occurred or there is any discrepancy in the order, please contact General Monitors. Refer to Section 7.0 for contact information.

NOTE: Each FL4000H is completely tested at the factory; however, a system check is required upon initial start-up to guarantee system integrity.

3.2 Required Tools

The following tools are required to install the FL4000H:

Table 4: Required Tools

| Tool | Use |
|---|--|
| 5mm Allen wrench | To fasten/remove front assembly from base(included) |
| Flat-head screwdriver 3/16 inch (5 mm) maximum | To connect wires into the Terminal Block (included) |
| Adjustable wrench | To make conduit and cable gland connections (not included) |

3.3 Detector Location Guidelines

Several variables are involved in selecting locations to install detectors. There are no hard and fast rules defining the optimum location to ensure proper flame detection. However, the following general suggestions should be considered in regard to particular conditions at the site where the unit(s) is being installed:

3.3.1 Detector Field of View

Each FL4000H Flame Detector has a maximum range of 210 feet (64 m). The FOV⁵ has its vertex at the center of the detector. Horizontal FOV is measured in the horizontal plane going through the center axis of the detector, and vertical FOV is measured in the vertical plane going through the same axis. Both horizontal and vertical FOV are defined for high, medium and low sensitivity settings of the FL4000H, as shown in Figure 9 through Figure 14.

Table 5: Maximum Specified Fields of View at High Sensitivity⁶

| Field of View: Horizontal | | Field of View: Vertical | |
|---------------------------|-------------------|-------------------------|-------------------|
| Max. Specified Range | Max Specified FOV | Max Specified Range | Max Specified FOV |
| 210 ft (64 m) | 90° | 230 ft (70 m) | 75° |
| 100 ft (31 m) | 100° | 100 ft (30 m) | 80° |
| 30 ft (9 m) | 90° | 30 ft (9 m) | 90° |

⁵ *Maximum specified FOV* is the angle at which FL4000H can detect the flame at 50% of the maximum specified range.

⁶ *Maximum specified FOV* is the angle at which FL4000H can detect the flame at 50% of the maximum specified range.

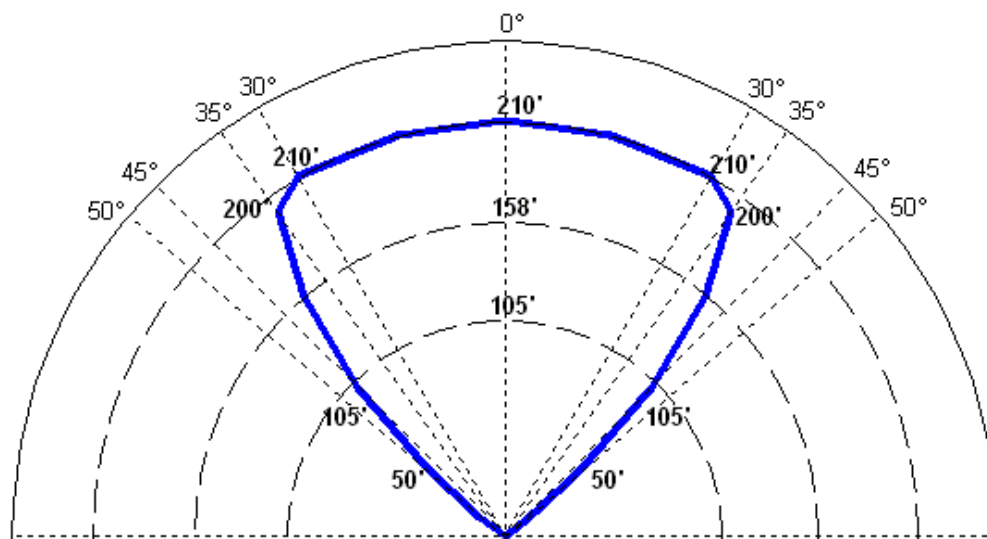


Figure 9: Horizontal FOV – *n*-Heptane – High Sensitivity.

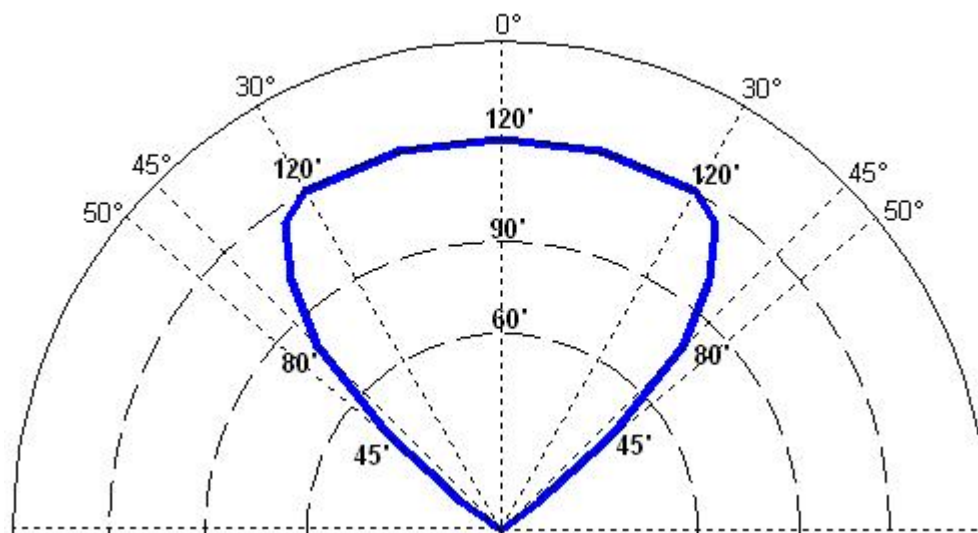


Figure 10: Horizontal FOV – *n*-Heptane – Medium Sensitivity.

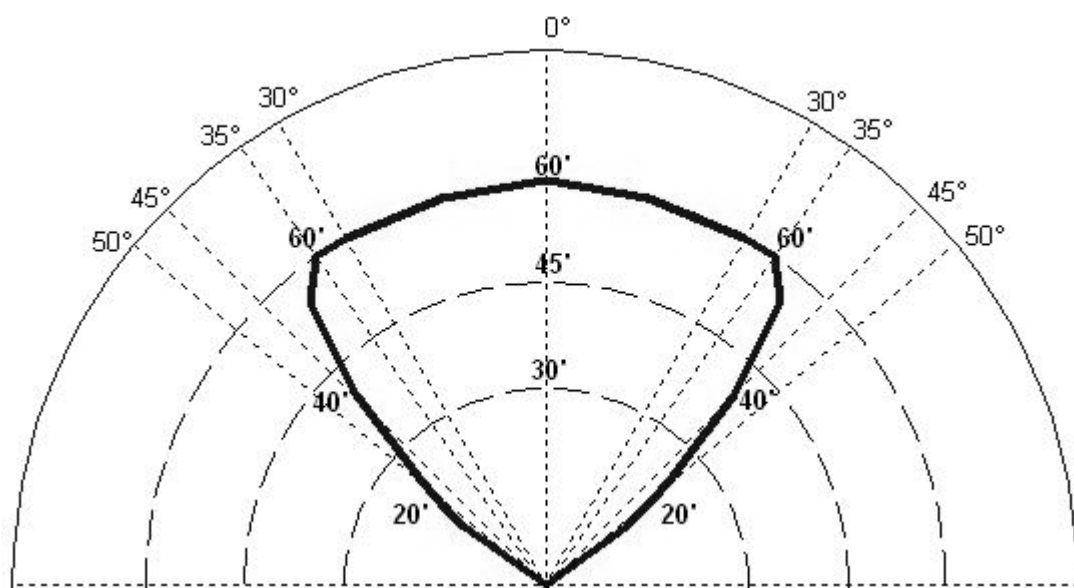


Figure 11: Horizontal FOV – *n*-Heptane – Low Sensitivity.

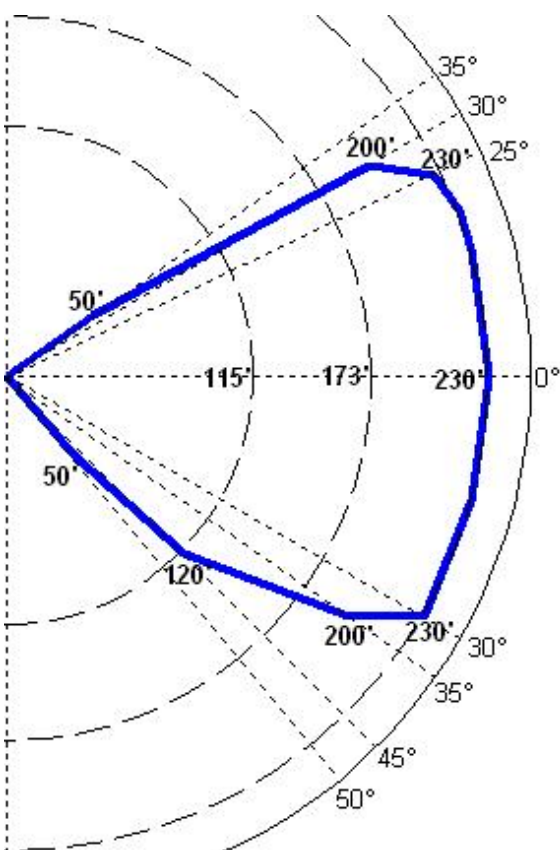


Figure 12: Vertical FOV – *n*-Heptane – High Sensitivity.

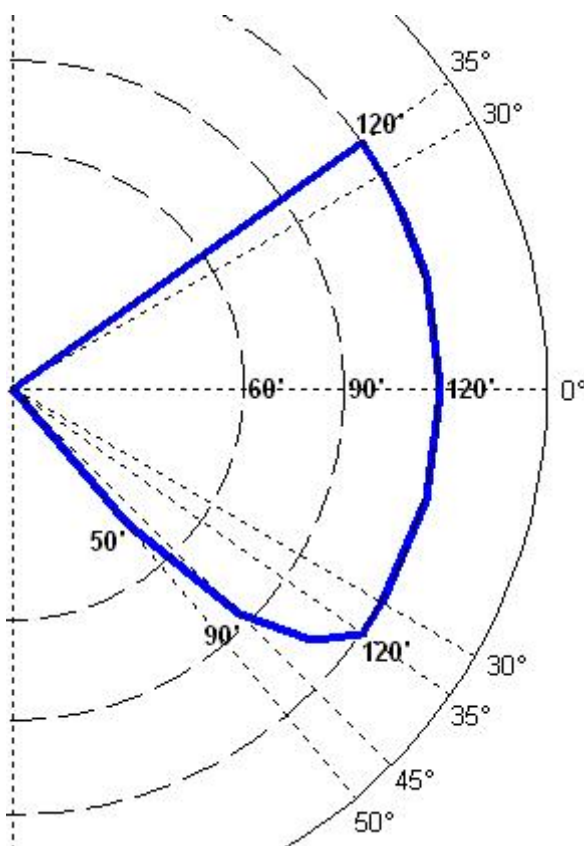


Figure 13: Vertical FOV – *n*-Heptane – Medium Sensitivity.

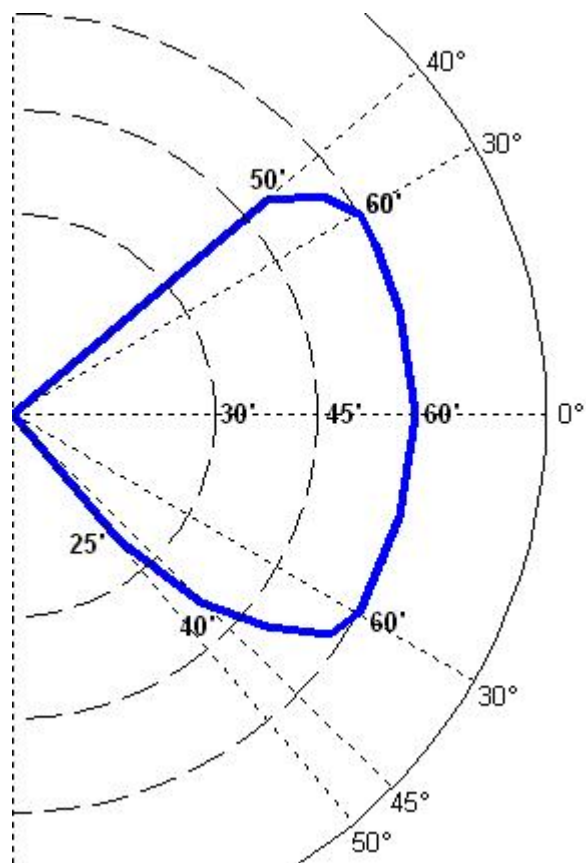


Figure 14: Vertical FOV – *n*-Heptane – Low Sensitivity.

3.3.2 Optical Sensitivity Range

The distance at which the detector will respond to a flame is a function of the intensity of that flame. The maximum distance is 210 ft (64.0 m) for an *n*-heptane fire with a surface area of 1 ft² (0.092 m²). The following table shows the specified ranges for a given sensitivity setting.

Table 6: Sensitivity Settings for *n*-Heptane

| Sensitivity Setting | Specified Range ft (m) |
|---------------------|------------------------|
| Low | 60 (18) |
| Medium | 120 (37) |
| High | 210 (64) |

3.3.3 Environmental Factors

- Observe the ambient temperature range for the specific model – refer to Environmental Specifications (Section 8.2.5). For outdoor installations or other areas exposed to intense, direct solar radiation, the detector may reach temperatures well above specifications. For this condition, a cover for shade may be required to bring the detector temperature within specifications. As with any cover or object near-by, make sure the field of view of the detector is not obstructed.
- Avoid conditions of ice build up on the optical detector windows. Complete icing-over of the IR detector window can result in fault conditions.
- Modulated reflected sunlight shining at the face of the FL4000H reduces flame detection distance.

3.4 Field Wiring Procedure

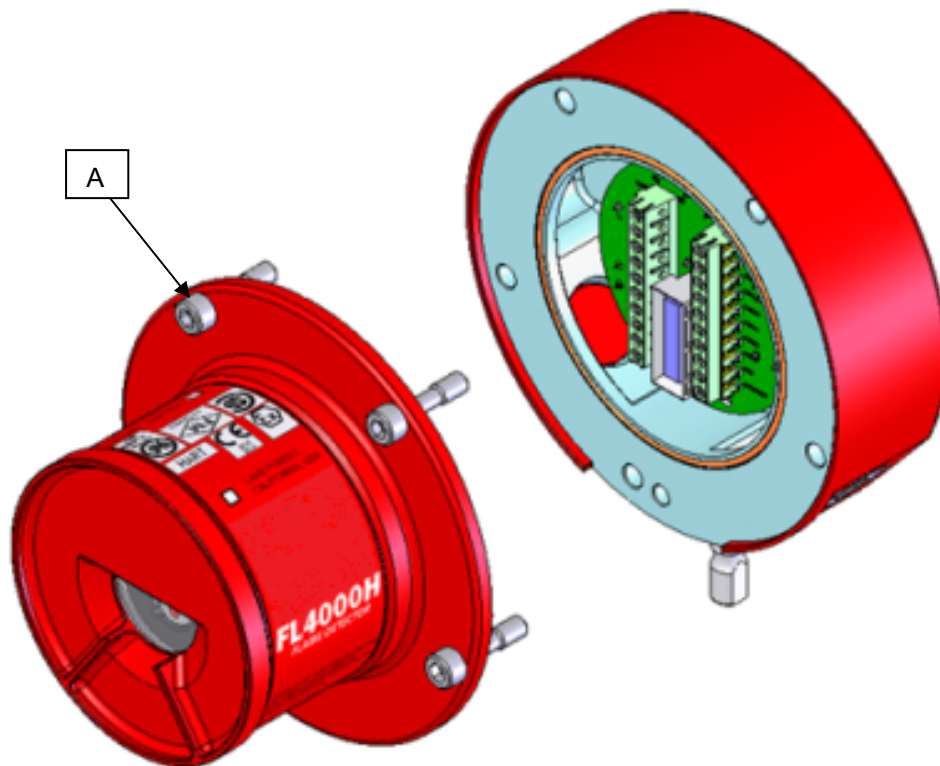


Figure 15: FL4000H Housing

The following procedure should be used in conjunction with Figure 15:

1. Loosen the captive screws (A) located on the Optical Housing Assy.
2. Pull the Optical Housing Assy from the Base Housing Assy to separate, gently rock from side to side if necessary to loosen the connector's grip.
3. Make all necessary wiring connections as described in Sections 3.6.1 thru 3.6.12. For an example of wiring, please refer to the connection diagram in Figure 5.
4. Set switch selectable options as described in Section 3.7 .
5. Reassemble the unit using steps 1 thru 2 in reverse.



CAUTION: Do not unscrew the field wiring board from the base housing assembly for wiring.

3.5 Detector Mounting and Installation

The FL4000H is enclosed in an explosion proof assembly, which is rated for use in the environments specified in Section 8.3.2.

- The unit should be mounted free from shock and vibration and convenient for visual inspection and cleaning.
- The detector(s) should be tilted downward so that dust or moisture does not accumulate on the sapphire window.
- The detector(s) should be mounted in locations, which will inhibit people or objects from obscuring the detector's FOV.

NOTE: Frequent inspection, cleaning, and sensitivity checking is suggested for detectors mounted in dirty environments.



CAUTION: General Monitors requires that the FL4000H conduit entry be sealed per the Canadian Electrical Code Handbook (Part 1, Section 18-154) and NEC Article 501. Conduit seals or approved Ex d glands prevent water or gas from entering the detector's housing through the conduit entry. Water entering the housing through the conduit entry will damage the electronics and nullify the warranty.

The FL4000H is mounted as shown in Figure 16 and the overall product dimensions are depicted in Figure 17.

NOTE: Conduit seal must be within 18" of unit.

NOTE: Non-hardening thread sealant should be used if the plugs are removed or re-installed in order to preserve ingress protection rating.

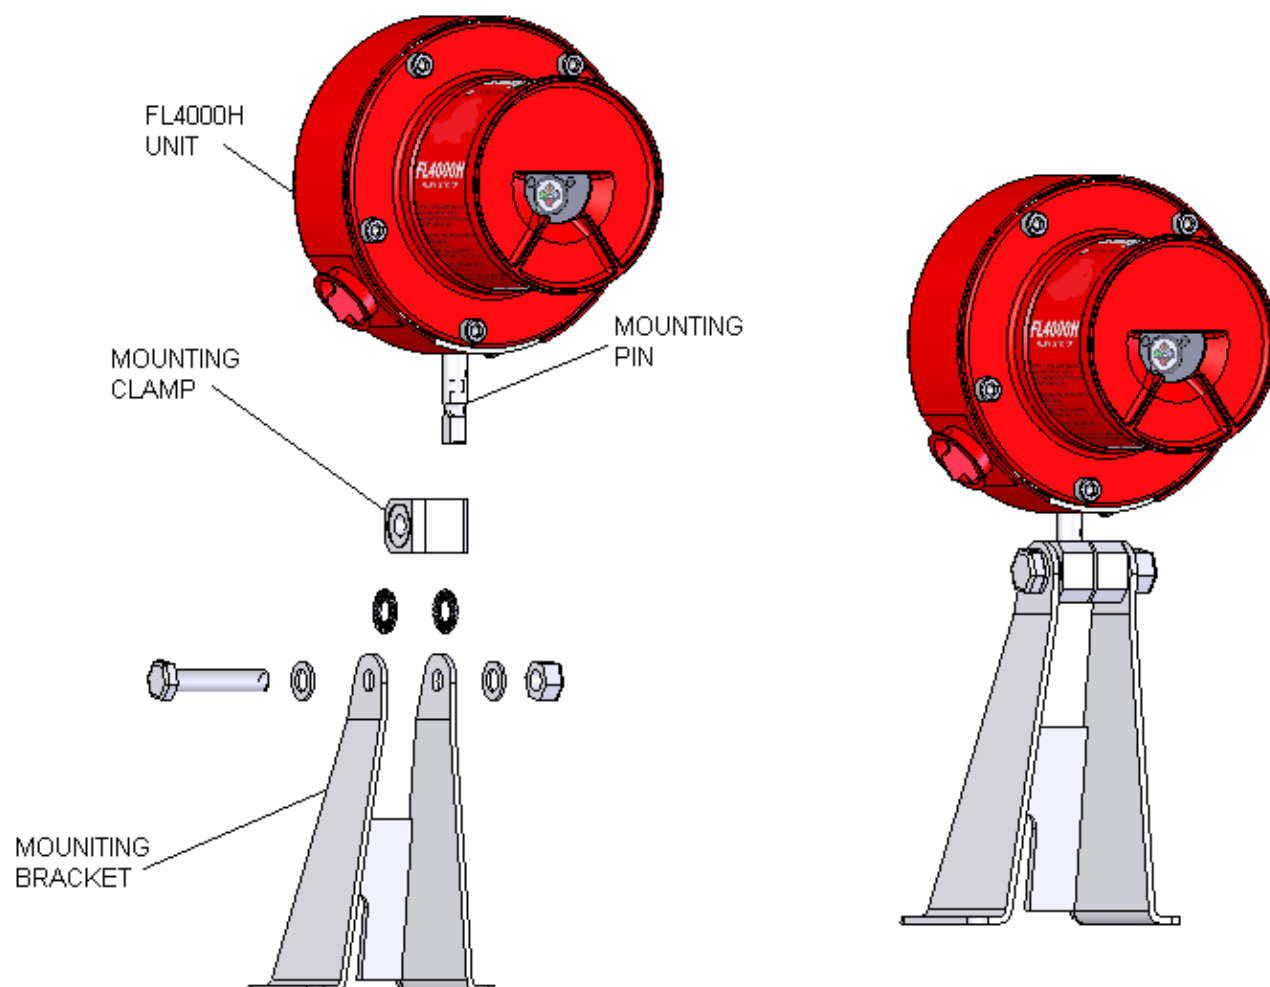


Figure 16: Detector Mounting and Installation

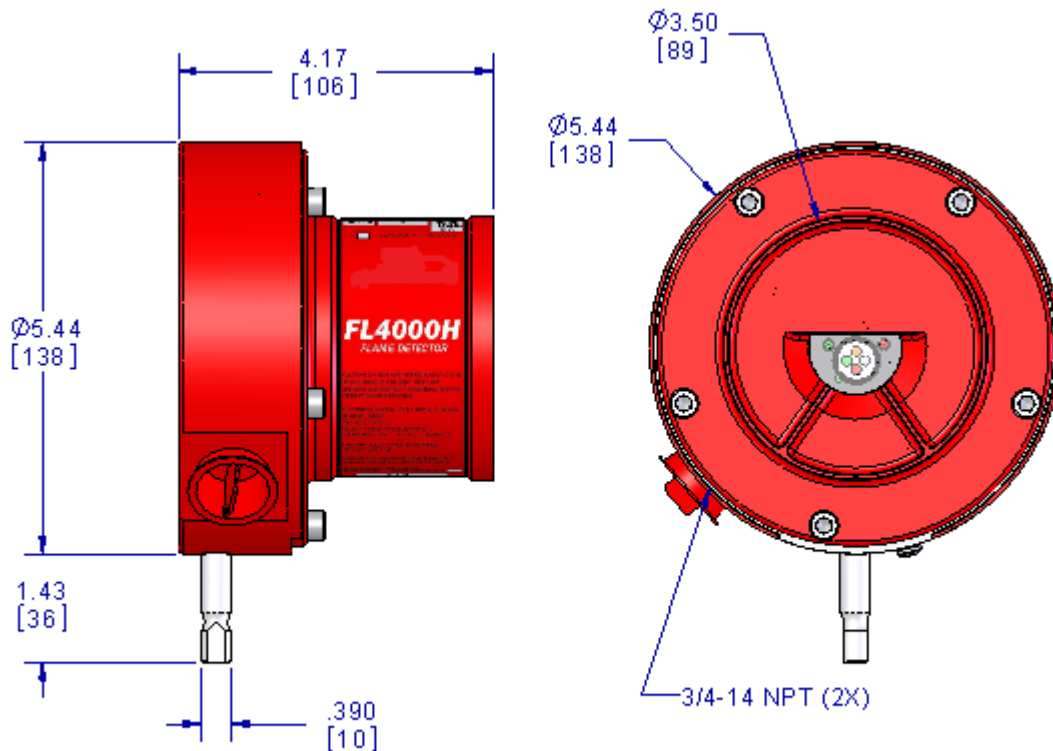


Figure 17: Dimensional Drawing

3.6 Terminal Connections

All wire connections are made through the 3/4 inch (1.9 cm) NPT openings in the Base Housing to the Terminal Block. The Terminal Block is located in the Base Housing Assembly and accepts 14 AWG (2.08 mm²) to 22 AWG (0.33 mm²) stranded or solid-core wire. Each wire should be stripped as shown in Figure 18.

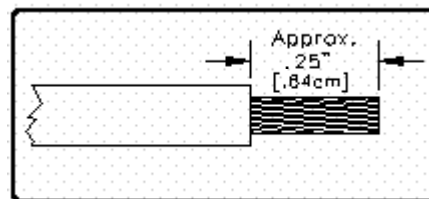


Figure 18: Wire-Strip Lengths

To connect the wire to the Terminal Block, insert the conductor into the connection space (Figure 20) and tighten the corresponding screw terminal.

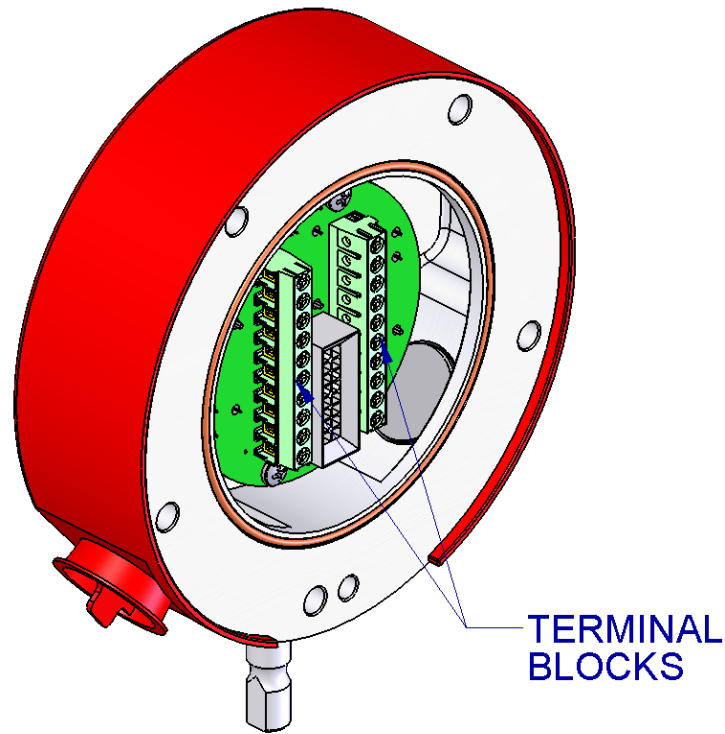


Figure 19: Base Housing and Terminal Blocks

Table 7: Terminal Block Connections

| Terminal Block – P2 | |
|---------------------|----------------------|
| Pin # | Description |
| 10 | WARN 2 |
| 9 | WARN 1 |
| 8 | WARN C |
| 7 | ALM C |
| 6 | ALM 1 |
| 5 | ALM 2 |
| 4 | RLY_10 (Relay Reset) |
| 3 | COM2+/DATA2+ |
| 2 | COM2-/DATA2- |
| 1 | CAL_10 |

| Terminal Block – P1 | |
|---------------------|-----------------------------------|
| Pin # | Description |
| 1 | FLT 2 |
| 2 | FLT 1 |
| 3 | FLT C |
| 4 | TEST_10 (Test Mode) |
| 5 | COM1+/DATA1+ |
| 6 | COM1-/DATA1- |
| 7 | 0-20mA |
| 8 | +24 V _{In} |
| 9 | GND/COM |
| 10 | CHGND/CHASGND (Chassis Ground) |

There are twenty possible terminal connections.

Sections 3.6.1, 3.6.2, and 3.6.4 provide a description and specification for each connection.

3.6.1 Alarm Relay

Table 8: Alarm Relay Terminals

| Terminal Block | Connection Point | Block Name | User Relay Settings | |
|----------------|------------------|------------|-----------------------|--------------------|
| | | | Normally De-energized | Normally Energized |
| P2 | Term 5 | ALM2 | Alarm NO | Alarm NC |
| P2 | Term 6 | ALM1 | Alarm NC | Alarm NO |
| P2 | Term 7 | ALMC | Alarm Common | Alarm Common |

NOTE: NO = Normally Open; NC = Normally Closed

Description: The connections are to the single pole, double throw (SPDT) ALARM relay. ALARM output is time delayed for 0, 8, 10, or 14 seconds. This time delay can be set by Modbus (RS-485) or the user selectable dipswitch (Section 3.7). Note that a minimum time delay of 8 seconds can be applied if the flame source is removed within 50% of set delay time from the start of flame. Please refer to Sec.3.7.1. If set via Modbus below 8 seconds, the detector may go into alarm even if the flame source is removed within 50% of the delay time.

The ALARM output can be normally energized or de-energized, latching or non-latching, and these options are also set via Modbus or by a dipswitch. The ALARM relay contact ratings are 8 A @ 250 VAC and 8 A @ 30 VDC. Refer to Figure 20 for all relay connections.

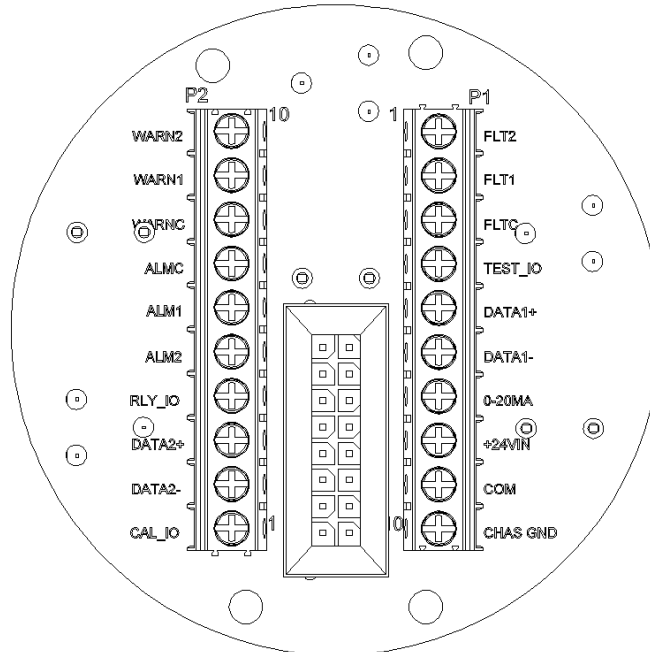


Figure 20: Terminal Connections⁷

⁷ For ULC-recommended wiring, please see Figure 5.

3.6.2 Warning Relay

Table 9: Warning Relay Terminals

| Terminal Block | Connection Point | Block Name | User Relay Settings | |
|----------------|------------------|------------|-----------------------|--------------------|
| | | | Normally De-energized | Normally Energized |
| P2 | Term 8 | WARNC | Warn Common | Warn Common |
| P2 | Term 9 | WARN1 | Warn NC | Warn NO |
| P2 | Term 10 | WARN2 | Warn NO | Warn NC |

NOTE: NO = Normally Open; NC = Normally Closed

Description: These connections are to the SPDT WARN relay. The WARN output is immediate on the FL4000H. The WARN output can be normally energized or de-energized, latching, or non-latching. These options are also set via Modbus or by a dipswitch (Section 3.7). The WARN relay contact ratings are 8 A @ 250 VAC and 8 A @ 30 VDC.

Refer to Figure 20 for all relay connections.

3.6.3 Alarm Wiring Relay Protection

Inductive loads (bells, buzzers, relay, contractors, solenoid valves, etc.) connected to the Alarm, Warn, and Fault relays must be clamped down as shown on diagrams in Figure 21. Unclamped inductive loads can generate voltage spikes in excess of 1000 volts. Spikes of this magnitude will cause false alarms and possible damage.

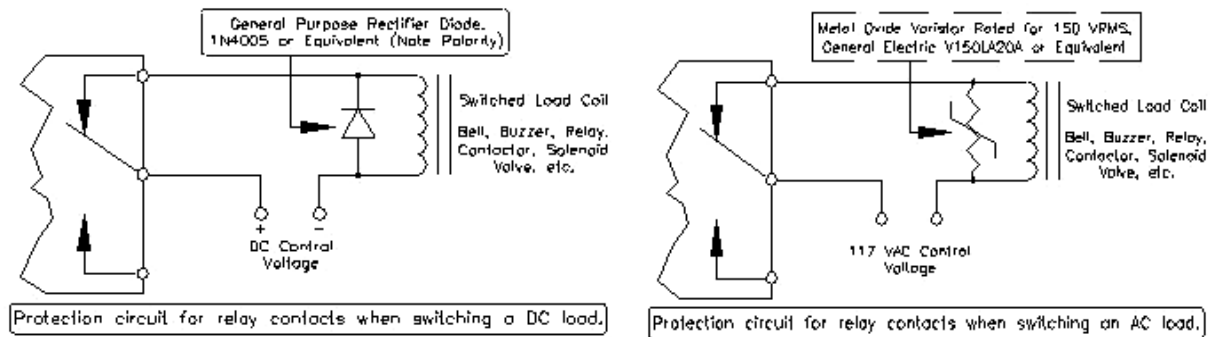


Figure 21: Relay Contacts

Refer to Figure 20 for all relay connections.

3.6.4 Fault Relay

Table 10: Fault Relay Terminals

| Terminal Block | Connection Point | Block Name | Normally Energized |
|----------------|------------------|------------|--------------------|
| P1 | Term 1 | FLT2 | Fault NC |
| P1 | Term 2 | FLT1 | Fault NO |
| P1 | Term 3 | FLTC | Fault Common |

NOTE: NO = Normally Open; NC = Normally Closed

Description: These connections are to the SPDT FAULT relay. The FAULT output configuration is normally energized and non-latching. This is the standard output configuration and it cannot be changed.

The FAULT circuit will be activated during the time-out function, a low power or loss of power condition, or during a failed COPM check. During these conditions, the FAULT relays will de-energize and the analog output signal will drop to 0 mA (2 mA for COPM Faults, 3.5 mA with HART or 1.25 mA for HART with small current enabled) for the duration of the FAULT. The FAULT relay contact ratings are 8 A @ 250 VAC and 8 A @ 30 VDC.

Refer to Figure 20 for all relay connections.

3.6.5 Alarm Reset Terminal

Table 11: Alarm Reset Terminal

| Terminal Block | Connection Point | Block Name | Setting |
|----------------|------------------|------------|-------------|
| P2 | Term 4 | RLY_IO | Relay Reset |

The RESET, when activated, returns a latched ALARM and/or WARN output that is no longer valid to its original state. For this RESET function, place one contact of a SPST (single pole, single throw), normally open, momentary switch to P2 Terminal 4 and the other contact to P1 terminal 9 (GND). To activate, press and release the switch.

3.6.6 Test Mode Terminal

Table 12: Test Mode Terminal

| Terminal Block | Connection Point | Block Name | Setting |
|----------------|------------------|------------|-----------|
| P1 | Term 4 | TEST_IO | Test Mode |

By connecting one contact of a SPST, normally open, momentary switch to P1 terminal 4 and the other contact to P1 terminal 9 (GND), the user can put the unit into a special test mode. When the switch is first closed, the mode is set and the FL4000H goes to 1.5 mA or 3.5 mA with HART and small HART current disabled (ready mode) and remains at this value while detecting the Test Lamp. The relays are not activated. Closing the switch a second time or after approximately 3 minutes, the unit will return to normal operation.

NOTE: When in test mode via ground wire, the Test Lamp triggers a “ready” condition only.


3.6.7 Alarm Test Terminals

Table 13: Alarm Test Terminals

| Terminal Block | Connection Point | Block Name | Setting |
|----------------|------------------|------------|-------------|
| P1 | Term 4 | TEST_IO | Test Mode |
| P2 | Term 4 | RLY_IO | Relay Reset |

By connecting one contact of a DPST, normally open, momentary switch to each of the P1 terminal 4 and P2 terminal 4 simultaneously and the other contact to (GND), the user can perform an Alarm Test (Figure 22). Activating this switch for 0 to 14 seconds, depending on the alarm time delay settings, can test the alarm outputs of the Flame Detector. The Alarm Test will activate the WARN and ALARM relay outputs as well as the appropriate analog output. The Flame Detector will remain in this state until the switch is released or until 3 minutes has elapsed.

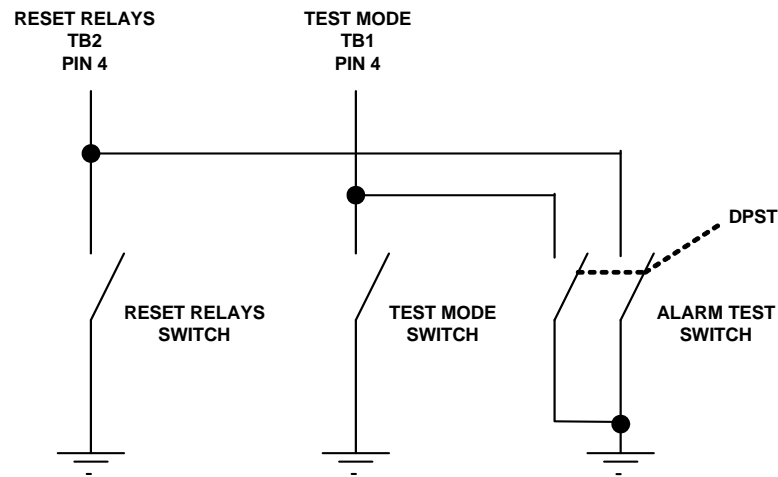NOTE: The latching WARN and / or ALARM will have to be reset manually.



NOTE: ALL SWITCHES ARE MOMENTARY ON

Figure 22: Wiring Diagram – Reset Relays, Test Mode, & Alarm Test

3.6.8 Analog Output

Table 14: Analog Output Terminal

| Terminal Block | Connection Point | Block Name | Setting |
|----------------|------------------|------------|---------------|
| P1 | Term 7 | 0 – 20 mA | Analog Output |

The 0 to 20 mA output is a current signal that corresponds to the following:

Table 15: Analog Output Levels

| Analog Output | Dual Modbus | HART (3.5 mA) | HART (1.25 mA) |
|----------------------|---------------|---------------|----------------|
| Startup ⁸ | 0 to 0.2 mA | 3.5 mA | 1.25 mA |
| FAULT Signal | 0 to 0.2 mA | 3.5 mA | 1.25 mA |
| Test Mode | 1.5 ± 0.2 mA | 3.5 mA | 1.5 mA |
| COPM Fault Signal | 2.0 ± 0.2 mA | 3.5 mA | 2.0 mA |
| Ready signal | 4.3 ± 0.2 mA | 4.3 ± 0.2 mA | 4.3 ± 0.2 mA |
| WARN signal | 16.0 ± 0.2 mA | 16.0 ± 0.2 mA | 16.0 ± 0.2 mA |
| ALARM signal | 20.0 ± 0.2 mA | 20.0 ± 0.2 mA | 20.0 ± 0.2 mA |

The maximum analog output load is 600 Ω.

NOTE: The COPM Fault Signal may also be set to 0 mA at the factory (non HART only).

3.6.9 Cable Requirements

For interfacing with 250 Ω input impedance devices, the following maximum cable lengths apply (maximum 50 Ω loop):

Table 16: Maximum Cable Lengths for 250 Ω Inputs

| AWG | Feet | Meters |
|-----|-------|--------|
| 14 | 9,000 | 2,750 |
| 16 | 5,800 | 1,770 |
| 18 | 3,800 | 1,160 |
| 20 | 2,400 | 730 |
| 22 | 1,700 | 520 |

3.6.10 Power

Table 17: Power Terminals

| Terminal Block | Connection Point | Block Name | Setting |
|----------------|------------------|------------|---------------------------|
| P1 | Term 8 | +24IN | +24 V _{in} (VDC) |
| P1 | Term 9 | GND | Ground (COM) |

Table 17 shows the power connections for the FL4000H. The supply voltage range is 20 to 36 VDC at the detector (low voltage is detected at 18.5 VDC). The following maximum cable lengths apply for a +24 VDC supply (maximum 20 Ω loop):

Table 18: Maximum Cable Lengths for +24 VDC

| AWG | Feet | Meters |
|-----|-------|--------|
| 14 | 4,500 | 1,370 |
| 16 | 2,340 | 715 |
| 18 | 1,540 | 470 |
| 20 | 970 | 300 |
| 22 | 670 | 205 |

⁸ Startup mode lasts exactly 15 seconds.

3.6.11 Modbus (RS-485) Output

Table 19: Modbus Terminals

| Terminal Block | Connection Point | Setting |
|----------------|------------------|-----------|
| P1 | Term 5 | COM1+ (A) |
| P1 | Term 6 | COM1- (B) |
| P2 | Term 2 | COM2- (B) |
| P2 | Term 3 | COM2+ (A) |

The connections for the Modbus output are shown in Table 19. The Modbus connection is used to either query the unit's status or to configure the unit. See Section 4.0 for detailed information on Modbus protocol.

3.6.12 Chassis Ground

Table 20: Chassis Ground Terminal

| Terminal Block | Connection Point | Block Name | Setting |
|----------------|------------------|------------|----------------|
| P1 | Term 10 | CHGND | Chassis Ground |

For proper operation of the detector, the FL4000H must be grounded through a wire to the chassis. Table 20 shows the terminal block and connection point for the chassis ground terminal. Failure to establish a ground connection can lead to greater susceptibility of the detector to electric surges, electromagnetic interference, and ultimately, damage to the instrument.

3.7 Switch Selectable Options

All settings on the FL4000H are selected via a dipswitch on the Power/Relay board or via Modbus (overrides switch settings). To set these options, remove the detector head from the Base Assembly and locate the dipswitch (Figure 23). On the dipswitch, ON/CLOSED means the switch is pushed in on the side labeled ON or CLOSED (opposite the OPEN side). OFF/OPEN means the switch is pushed in on the side with the number corresponding to the switch position or the side labeled OPEN – refer to Table 21 for dipswitch assignments. The settings for the WARN and ALARM outputs are covered in Section 3.6

3.7.1 Time Delay Settings

Time delay set via dipswitch guarantees that FL4000H will not go into ALARM mode (20 mA) if the flame source is removed within 50% of set delay time from the start of flame. The unit will always go into WARN mode (16 mA) upon seeing a flame source.

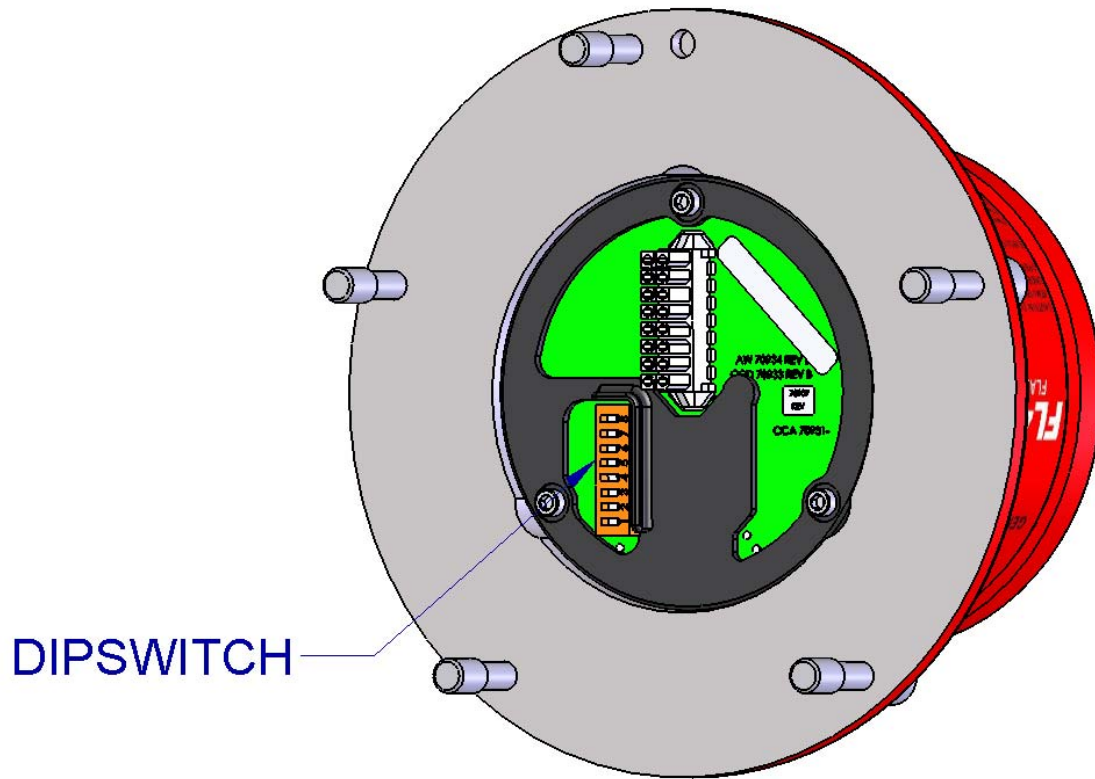


Figure 23: Dipswitch Location

Table 21: Dipswitch Options

| # | Option | On/Closed | Off/Open |
|----|-----------------------------|-----------|----------|
| 1 | High Sensitivity | | 1 and 2 |
| 2 | Medium Sensitivity | 1 | 2 |
| 3 | Low Sensitivity | 2 | 1 |
| 4 | 0-Second Alarm Time Delay | 3 and 4 | |
| 5 | 8-Second Alarm Time Delay | 4 | 3 |
| 6 | 10-Second Alarm Time Delay | | 3 and 4 |
| 7 | 14-Second Alarm Time Delay | 3 | 4 |
| 8 | ALARM Non-Latching | | 5 |
| 9 | ALARM Latching | 5 | |
| 10 | WARN Non-Latching | | 6 |
| 11 | WARN Latching | 6 | |
| 12 | ALARM Normally Energized | 7 | |
| 13 | ALARM Normally De-Energized | | 7 |
| 14 | WARN Normally Energized | 8 | |
| 15 | WARN Normally De-Energized | | 8 |

3.8 Powering of the FL4000H

After connecting to a 24 VDC power source, the unit will go through a power up delay of approximately 15 seconds. The LEDs will blink in alternating red – green sequence, the unit will output an analog signal of 0mA (3.5 mA with HART or 1.25 mA for HART with small current enabled) and the fault relay will be in the de-energized state. If the unit is configured with relays energized, the relays will de-energize for approximately 0.5 seconds. Upon completion of the power on sequence, the green LED will alternate - on for 5 seconds and off for 0.5 seconds to indicate a READY status.

3.9 Power up Grounding of the Test and Relay Reset Lines

During power up, grounding the reset relay line for approximately 1 second forces the Modbus parameters on both channels to go to their default values of: 19,200 Baud, 8-N-1 format, and Unit ID = 1.

During power up, grounding the test line for approximately 1 second forces the unit to use the dipswitch settings rather than use the settings stored in the flash memory. These settings are for the energized/de-energized relay state, the alarm delay, and the unit sensitivity.

4.0 Modbus Interface

4.1 Introduction

The FL4000H provides communicating ability via the industry standard Modbus protocol, while acting as the slave device in a typical master/slave configuration. Upon receiving an appropriate query from the master, the FL4000H will respond with a formatted message as defined below.

4.2 Communication Slave Address

The FL4000H communication slave address is a unique ID used by the Modbus protocol to identify each unit on a multi drop Modbus communication bus. The address may contain the values 1 – 247. There are two communication channels on the FL4000H. Each channel may have a separate slave address. The default slave address for each channel is 1. Register 0x09 is used to modify the address for channel COM1 and register 0x2F is used to modify the address for channel COM2.

4.3 Baud Rate

The FL4000H baud rate is selectable using either the Modbus communications interface. The selectable baud rates are 38,400, 19,200, 9,600, 4,800, or 2,400 bits per second (bps). The factory set baud rate is 19,200 bps. Register 0x0B is used to modify the baud rate for comm channel 1 and register 0x30 is used to modify the baud rate for comm channel 2. The selectable baud rates are as follows:

Table 22: Selectable Baud Rates

| Modbus Register Value | Baud Rate (bps) |
|-----------------------|-----------------|
| 04 | 38,400 |
| 03 | 19,200 |
| 02 | 9,600 |
| 01 | 4,800 |
| 00 | 2,400 |

4.4 Data Format

The data format is selectable using the Modbus communications interface. The factory set data format is 8-N-1. Register 0x0C is used to modify the data format for comm channel 1 and register 0x31 is used to modify the format for comm channel 2. The selectable data formats are as follows:

Table 23: Selectable Data Formats

| Modbus Register Value | Format | Data Bits | Parity | Stop |
|-----------------------|--------|-----------|--------|------|
| 00 | 8-N-1 | 8 | None | 1 |
| 01 | 8-E-1 | 8 | Even | 1 |
| 02 | 8-O-1 | 8 | Odd | 1 |
| 03 | 8-N-2 | 8 | None | 2 |

4.5 Supported Function Codes

The FL4000H supports the following function codes:

- Function Code 03 (Read Holding Registers) is used to read status from the slave unit.
- Function Code 06 (Preset Single Register) is used to write a command to the slave unit.

4.6 Modbus Read Status Protocol (Query / Response)

A master device reads registers from the FL4000H by sending an 8-byte message (Table 24).

Table 24: Modbus Read Register(s) Request

| Byte | Modbus | Range | Referenced to FL4000H |
|---|--------------------------|------------------|----------------------------|
| 1 st | Slave Address | 1-247* (Decimal) | FL4000H ID (Address) |
| 2 nd | Function Code | 03 | Read Holding Registers |
| 3 rd | Starting Address Hi | 00 | Not Used by the FL4000H |
| 4 th | Starting Address Lo | 00-44 (Hex) | FL4000H Commands |
| 5 th | Number of Registers Hi | 00 | Not Used by the FL4000H |
| 6 th | Number of Registers Lo** | 01 – 45 (Hex) | Number of 16 Bit Registers |
| 7 th | CRC Lo | 00-FF (Hex) | CRC Lo Byte |
| 8 th | CRC Hi | 00-FF (Hex) | CRC Hi Byte |
| * Address 0 is reserved for Broadcast Mode and is not supported at this time. | | | |
| ** A maximum of 69 registers can be requested during a single block of time. | | | |

Upon receiving a valid read register request from the master device, the FL4000H will respond with a message (Table 25). If the query generates an error, an exception message is returned to the master device (Section 4.8).

Table 25: Modbus Read Register(s) Response

| Byte | Modbus | Range | Referenced to FL4000H |
|---|---------------|------------------|--|
| 1 st | Slave Address | 1-247* (Decimal) | FL4000H ID (Address) |
| 2 nd | Function Code | 03 | Read Holding Registers |
| 3 rd | Byte Count ** | 02 – 8A (Hex) | Number of Data Bytes (N ⁺) |
| 4 th | Data Hi ** | 00-FF (Hex) | FL4000H Hi Byte Status Data |
| 5 th | Data Lo ** | 00-FF (Hex) | FL4000H Lo Byte Status Data |
| : | : | : | : |
| : | : | : | : |
| N ⁺ +4 | CRC Hi | 00-FF (Hex) | CRC Hi Byte |
| N ⁺ +5 | CRC Lo | 00-FF (Hex) | CRC Lo Byte |
| * Address 0 is reserved for Broadcast Mode and is not supported at this time. | | | |
| ** Byte count and the number of returned data bytes depends on the number of requested registers. | | | |
| + N denotes the number of returned data bytes. | | | |

4.7 Modbus Write Command Protocol (Query / Response)

A master device writes to a FL4000H register by sending a properly formatted 8-byte message (Table 26).

Table 26: Modbus Write Register Request

| Byte | Modbus | Range | Referenced to FL4000H |
|---|---------------------|------------------|----------------------------------|
| 1 st | Slave Address | 1-247* (Decimal) | FL4000H ID (Address) |
| 2 nd | Function Code | 06 | Preset Single Registers |
| 3 rd | Register Address Hi | 00 | Not Used by FL4000H |
| 4 th | Register Address Lo | 00-FF (Hex) | FL4000H Register Address Lo Byte |
| 5 th | Preset Data Hi | 00-03 (Hex) | FL4000H Hi Byte Command Data |
| 6 th | Preset Data Lo | 00-FF (Hex) | FL4000H Lo Byte Command Data |
| 7 th | CRC Hi | 00-FF (Hex) | CRC Hi Byte |
| 8 th | CRC Lo | 00-FF (Hex) | CRC Lo Byte |
| * Address 0 is reserved for Broadcast Mode and is not supported at this time. | | | |

Upon receiving a valid register write request from the master device, the FL4000H will respond with a message (Table 27). If the write request generates an error, an exception message is returned to the master device (Section 4.8).

Table 27: Modbus Write Register Response

| Byte | Modbus | Range | Referenced to FL4000H |
|---|---------------------|------------------|----------------------------------|
| 1 st | Slave Address | 1-247* (Decimal) | FL4000H ID (Address) |
| 2 nd | Function Code | 06 | Preset Single Registers |
| 3 rd | Register Address Hi | 00 | Not Used by FL4000H |
| 4 th | Register Address Lo | 00-FF (Hex) | FL4000H Register Address Lo Byte |
| 5 th | Preset Data Hi | 00-FF (Hex) | FL4000H Hi Byte Command Data |
| 6 th | Preset Data Lo | 00-FF (Hex) | FL4000H Lo Byte Command Data |
| 7 th | CRC Hi | 00-FF (Hex) | CRC Hi Byte |
| 8 th | CRC Lo | 00-FF (Hex) | CRC Lo Byte |
| * Address 0 is reserved for Broadcast Mode and is not supported at this time. | | | |

4.8 Exception Responses and Exception Codes

4.8.1 Exception Response

In a normal communications query and response, the master device sends a query to the FL4000H. Upon receiving the query, the FL4000H processes the request and returns a response to the master device. An abnormal communication between the two devices produces one of four possible events:

- If the FL4000H does not receive the query due to a communications error, then no response is returned from the FL4000H and the master device will eventually process a timeout condition for the query.
- If the FL4000H receives the query, but detects a communication error (CRC, etc.), then no response is returned from the FL4000H and the master device will eventually process a timeout condition for the query.
- If the FL4000H receives the query without a communications error, but cannot process the response within the master's timeout setting, then no response is returned from the FL4000H. The master device eventually processes a timeout condition for the query in

order to prevent this condition from occurring; the maximum response time for the FL4000H is 200 milliseconds. Therefore, the master's timeout setting should be set to 200 milliseconds or greater.

- If the FL4000H receives the query without a communications error, but cannot process it due to reading or writing to a non-existent FL4000H command register, then the FL4000H returns an exception response message informing the master of the error.

The exception response message has two fields that differentiate it from a normal response. The first is the function code – byte 2. This code will be 0x83 for a read exception and 0x86 for a write exception. The second differentiating field is the exception code – byte 3 (Section 4.8.2).

In addition, the total exception response length is 5-bytes rather than the normal message length.

Table 28: Exception Response

| Byte | Modbus | Range | Referenced to FL4000H |
|---|----------------|------------------|--|
| 1 st | Slave Address | 1-247* (Decimal) | FL4000H ID (Address) |
| 2 nd | Function Code | 83 or 86 (Hex) | Preset Single Registers |
| 3 rd | Exception Code | 01 – 06 (Hex) | Appropriate Exception Code (See Below) |
| 4 th | CRC Hi | 00-FF (Hex) | CRC Hi Byte |
| 5 th | CRC Lo | 00-FF (Hex) | CRC Lo Byte |
| * Address 0 is reserved for Broadcast Mode and is not supported at this time. | | | |

4.8.2 Exception Code

Exception Code Field: In a normal response, the FL4000H returns data and status in the response data field. In an exception response, the FL4000H returns an exception code (describing the FL4000H condition) in the data field. Below is a list of exception codes that are supported by the FL4000H:

Table 29: Exception Codes

| Code | Name | Description |
|------|----------------------|--|
| 01 | Illegal Function | The function code received in the query is not an allowable action for the FL4000H. |
| 02 | Illegal Data Address | The data address received in the query is not an allowable address for the FL4000H. |
| 03 | Illegal Data Value | A value contained in the query data field is not an allowable value for the FL4000H. |
| 04 | Reserved | NA |

4.9 Command Register Locations

Table 30: Command Register Locations

| Register Address (Hex) | Parameter | Function | Data Type | Data Range | Access |
|------------------------|---------------------|--|---------------|---|--------|
| 0x0000 | Analog Output | 0-20mA current output | Numeric Value | 0-65535 (0-20.0 mA) | R |
| 0x0001 | Operating Mode | View operating mode | Numeric Value | Table 31 | R |
| 0x0002 | Error Status | View present error | Bit Map | Table 32 | R |
| 0x0003 | Reserved | N/A | N/A | N/A | N/A |
| 0x0004 | Model Number | View Model ID | Numeric Value | 3500 | R |
| 0x0005 | Firmware Revision | Firmware Revision ID | 2 ASCII chars | 1 st char is blank, 2 nd is: A, B, C, ... | R |
| 0x0006 | COPM Fault | Indicates a COPM fault on at least 1 of the detectors | Bit Map | Bit 7 is 1 if any COPM fault, bits 0, 1, 2, 3 indicate sensor id. | R |
| 0x0007 | DIP Switch Override | Overrides the DIP Switches at Startup to use Flash Variables | Bit Map | 0 = Options read from DIP, 1 means from Flash | R/W |
| 0x0008 | Unit Options | Indicates which options are configured | Numeric Value | | R/W |
| 0x0009 | COM1 Address | Set/view address on Modbus channel 1 | Numeric Value | 1-247 | R/W |
| 0x000A | Reserved | N/A | N/A | N/A | N/A |
| 0x000B | COM1 Baud Rate | Set/view baud rate on Modbus channel 1 | Numeric Value | Table 33 | R/W |
| 0x000C | COM1 Data Format | Set/view data format on Modbus channel 1 | Numeric Value | Table 23 | R/W |
| 0x000D | COPM Count Sensor 1 | Number of COPM Faults on sensor 1 | Numeric Value | 0-65535 | R |
| 0x000E | COPM Count Sensor 2 | Number of COPM Faults on sensor 2 | Numeric Value | 0-65535 | R |
| 0x000F | COPM Count Sensor 3 | Number of COPM Faults on sensor 3 | Numeric Value | 0-65535 | R |
| 0x0010 | COPM Count Sensor 4 | Number of COPM Faults on sensor 4 | Numeric Value | 0-65535 | R |
| 0x0011 | Reset Relays | Remotely resets latched alarm & warning relays | Numeric Value | 1 = reset relays | W |
| 0x0012 | Remote Alarm Test | Activates Warn & Alarm Relays | Numeric Value | 1 = Alarm test, 0 = done test. | R/W |

| Register Address (Hex) | Parameter | Function | Data Type | Data Range | Access |
|------------------------|---------------------------------------|--|---------------|---------------------------|--------|
| 0x0013 | Clear COPM Fault Counts | Reset COPM Counters to zero. | Bit Map | Bit 1 = Reset | W |
| 0x0014 | Sensor Temperature | Temperature in Degrees C | Numeric Value | -128... +128 | R |
| 0x0015 – 0x001C | Reserved | N/A | N/A | N/A | N/A |
| 0x001D | HART Enable/Disable | Enable/disable HART | Numeric Value | 0 - disable 1 - enable | R/W |
| 0x001E – 0x001F | Reserved | N/A | N/A | N/A | N/A |
| 0x0020 | COM1 or COM2 Total Receive Errors | Number of receive errors on user Modbus | Numeric Value | 0-65535 | R |
| 0x0021 | Data Errors | Number of illegal data write errors on user Modbus | Numeric value | 0-65535 | R |
| 0x0022 | Function Code Errors | Number of function code errors on user Modbus | Numeric Value | 0-65535 | R |
| 0x0023 | Starting address errors | Number of starting register address errors | Numeric Value | 0-65535 | R |
| 0x0024 | Total COM1 Only Receive Errors | Total communication errors received on Comm 1 | Numeric value | 0-65535 | R |
| 0x0025 | CRC errors LO for serial channel | Number of CRC LO errors on user Modbus channels | Numeric value | 0-65535 | R |
| 0x0026 | CRC errors HI for user serial channel | Number of CRC HI errors on user Modbus channels | Numeric value | 0-65535 | R |
| 0x0027 | Total Overrun Errors COM1 Only | Total Overrun errors received on comm channel 1 | Numeric value | 0-65535 | R |
| 0x0028 | Reserved | N/A | N/A | N/A | N/A |
| 0x0029 | Total Framing Errors COM1 & COM2 | Total Framing errors received on comm channels 1 & 2 | Numeric value | 0-65535 | R |
| 0x002A-0x002C | Reserved | N/A | N/A | N/A | N/A |
| 0x002D | Clear Serial COM Errors | Clear Modbus communication errors | Numeric Value | 1 | W |
| 0x002E | HART small current | Enable/disable 1.25mA HART minimum current | Numeric Value | 0 – disable 1 - enable | R/W |
| 0x002F | COM2 Address | Set/view address on Modbus channel 2 | Numeric Value | 1-247 | R/W |
| 0x0030 | COM2 Baud Rate | Set/view baud rate on Modbus channel 2 | Numeric Value | Table 33 | R/W |
| 0x0031 | COM2 Data Format | Set/view data format on Modbus channel 2 | Numeric Value | Table 34 | R/W |

| Register Address (Hex) | Parameter | Function | Data Type | Data Range | Access |
|------------------------|--------------------------------|--|--------------------|------------------------------------|--------|
| 0x0032 – 0x003E | Reserved | N/A | N/A | N/A | N/A |
| 0x003F | Line Voltage | Line input voltage * 10.0 | Numeric Value * 10 | 50 - 360 | R |
| 0x0040 – 0x0046 | Reserved | N/A | N/A | N/A | N/A |
| 0x0047 | Real Time Clock Year, Month | Read/Set year and month of RTC | Numeric Value | 1 –99 year, 1– 12 month | R/W |
| 0x0048 | Real Time Clock Day, Hour | Read/Set day and hour of RTC | Numeric Value | 1 – 31 day, 0 – 23 hour | R/W |
| 0x0049 | Real Time Clock Minute, Second | Read/Set minutes and seconds of RTC | Numeric Value | 0 – 59 minutes 0 – 59 seconds | R/W |
| 0x004A – 0x0059 | Reserved | N/A | N/A | N/A | N/A |
| 0x005A | TEST LAMP Test Mode | Set/Reset TEST LAMP test mode. 0 = Normal Mode. 1 = Test Mode. | Numeric Value | 0 - 1 | R/W |
| 0x005B | Alarm Delay | Read/Set Alarm Delay | Numeric Value | 0 – 30 | R/W |
| 0x005C – 0x0090 | Reserved | N/A | N/A | N/A | N/A |
| 0x009A | Power Cycled Flag | Time Reset After power Cycled | Numeric Value | 0 = Time not Reset, 1 = Time Reset | R |
| 0x009B – 0x009F | Reserved | N/A | N/A | N/A | N/A |
| 0x00A0 | Event Index | Index of Logged Events | Numeric Value | 0 - 9 | R/W |
| 0x00A1 | Running Time Hi | Running Time Hi for Warning Event log entries | Numeric Value | 0 - 65535 | R |
| 0x00A2 | Running Time Low | Running Time Low for Warning Event log entries | Numeric Value | 0 - 65535 | R |
| 0x00A3 | Clock Time Hi | Hi byte = year, Lo byte month: Warning clock time | Numeric Value | 1 –99 year, 1– 12 month | R |
| 0x00A4 | Clock Time Mid | Hi byte = Day, Lo byte Hour: Warning clock time | Numeric Value | 1 – 31 day, 0 – 23 hour | R |
| 0x00A5 | Clock Time Low | Hi byte = Minute, Lo byte second: Warning clock time | Numeric Value | 0 – 59 minutes 0 – 59 seconds | R |
| 0x00A6 | Reserved | Reserved | Numeric Value | 0 | R |

| Register Address (Hex) | Parameter | Function | Data Type | Data Range | Access |
|------------------------|---------------------|--|---------------|----------------------------------|--------|
| 0x00A7 | Reserved | Reserved | Numeric Value | 0 | R |
| 0x00A8 | Warning Event Count | Total Warning Event Count | Numeric Value | 0 - 65535 | R |
| 0x00A9 | Running Time Hi | Running Time Hi for Alarm Event log entries | Numeric Value | 0 - 65535 | R |
| 0x00AA | Running Time Low | Running Time Low for Alarm Event log entries | Numeric Value | 0 - 65535 | R |
| 0x00AB | Clock Time Hi | Hi byte = year, Lo byte month: Alarm clock time | Numeric Value | 1 –99 year, 1– 12 month | R |
| 0x00AC | Clock Time Mid | Hi byte = Day, Lo byte Hour: Alarm clock time | Numeric Value | 1 – 31 day, 0 – 23 hour | R |
| 0x00AD | Clock Time Low | Hi byte = Minute, Lo byte second: Alarm clock time | Numeric Value | 0 – 59 minutes 0 – 59 seconds | R |
| 0x00AE | Reserved | Reserved | Numeric Value | 0 | R |
| 0x00AF | Reserved | Reserved | Numeric Value | 0 | R |
| 0x00B0 | Alarm Event Count | Total Alarm Event Count | Numeric Value | 0 - 65535 | R |
| 0x00B1 | Running Time Hi | Running Time Hi for Fault Event log entries | Numeric Value | 0 - 65535 | R |
| 0x00B2 | Running Time Low | Running Time Low for Fault Event log entries | Numeric Value | 0 - 65535 | R |
| 0x00B3 | Clock Time Hi | Hi byte = year, Lo byte month: Fault clock time | Numeric Value | 1 –99 year, 1– 12 month | R |
| 0x00B4 | Clock Time Mid | Hi byte = Day, Lo byte Hour: Fault clock time | Numeric Value | 1 – 31 day, 0 – 23 hour | R |
| 0x00B5 | Clock Time Low | Hi byte = Minute, Lo byte second: Fault clock time | Numeric Value | 0 – 59 minutes 0 – 59 seconds | R |
| 0x00B6 | Fault Code | See Table 32 | Numeric Value | 0 | R |
| 0x00B7 | Reserved | Reserved | Numeric Value | 0 | R |
| 0x00B8 | Fault Event Count | Total Fault Event Count | Numeric Value | 0 - 65535 | R |
| 0x00BA | Running Time Hi | Running Time Hi for Maintenance Event log entries | Numeric Value | 0 - 65535 | R |
| 0x00BB | Running Time Low | Running Time Low for Maintenance Event log entries | Numeric Value | 0 - 65535 | R |

| Register Address (Hex) | Parameter | Function | Data Type | Data Range | Access |
|------------------------|-------------------------|--|---------------|----------------------------------|--------|
| 0x00BC | Clock Time Hi | Hi byte = year, Lo byte month: Maintenance clock time | Numeric Value | 1 –99 year, 1– 12 month | R |
| 0x00BD | Clock Time Mid | Hi byte = Day, Lo byte Hour: Maintenance clock time | Numeric Value | 1 – 31 day, 0 – 23 hour | R |
| 0x00BE | Clock Time Low | Hi byte = Minute, Lo byte second: Maintenance clock time | Numeric Value | 0 – 59 minutes 0 – 59 seconds | R |
| 0x00BF | Reserved | Reserved | Numeric Value | 0 | R |
| 0x00C0 | Maintenance Event Count | Total Maintenance Event Count | Numeric Value | 0 - 65535 | R |
| 0x00C1 | Reset Event Counter | Reset All Events Counter to 0 | Numeric Value | 0 - 65535 | W |

4.10 Command Register Details

The following sections provide a detailed description of each user Modbus command register.

4.10.1 Analog (0x0000)

A read returns a value, which is proportional to the 0-20 mA output current. The value corresponds to a scaling of 0-65535 decimal.

4.10.2 Operating Mode (0x0001)

A read returns the present mode of the FL4000H. A write command changes the mode to the requested mode.

NOTE: Returns an Exception Code 03 (Illegal Data Value) if an illegal write is requested.

Table 31: Status Mode Values

| Mode | Decimal Value |
|---|---------------|
| Power-Up Delay | 1 |
| Warn Non-Latching Only | 2 |
| Warn and Alarm Non-latching | 3 |
| Warn Latching Only, Alarm Off | 4 |
| Alarm Latching Only | 5 |
| Warn & Alarm Latching | 6 |
| Ready State | 7 |
| Alarm Test | 10 |
| COPM Fault Detected | 11 |
| Warn Latching, Alarm Non-latching, Alarm On | 12 |
| TEST LAMP Cycle | 13 |
| TEST LAMP Cycle – Fire | 14 |

4.10.3 (Register 0x0002) Status/Error

A read returns the errors that are present, which are indicated by bit position. Table 32 shows the error code returned via the Modbus register 2:

Table 32: Modbus Error Codes

| Function | Bit Position |
|---------------------|--------------|
| COPM | 3 |
| Low Voltage | 4 |
| Data Flash Checksum | 6 |
| Code Flash Checksum | 7 |
| Relay Reset Shorted | 15 |

NOTE: Bits set to “1” when errors occur.

4.10.4 Unit Type (0x0004)

A read returns the Modbus identification number for the FL4000H. The identification number for the FL4000H is 3500.

4.10.5 Software Revision (0x0005)

A read returns the software revision of the FL4000H as two ASCII characters.

4.10.6 COPM Fault (0x0006)

A read returns the type of COPM Fault, which is either due to an obstruction of the window or detector malfunction. Cleaning the window or removing the obstacle can clear a COPM fault caused by a window obstruction.

- Bit 7 is 1 if a COPM fault exists
- Bits 0, 1, 2, or 3 indicate which of the detectors are in Fault

4.10.7 Dipswitch Override (0x0007)

A read indicates the status of the dipswitch override bit. A write command changes the state of the bit (Figure 24). When the dipswitch override bit is enabled, the options for the Detector Sensitivity, Relay Delay, Relay Latching/Non-Latching and Relay Energized/De-Energized features are controlled by the data stored in FLASH and are not controlled by the 8-position dipswitch. When the dipswitch override bit is disabled the options are under the control of the 8-position dipswitch. The override bit is located in the LSB of the Low Data Byte and the High Data Byte is not used.

- Bit = 1, Enabled: Configured from FLASH
- Bit = 0, Disabled: Configured from DIP Switch

NOTE: By grounding the TEST input during the first 1 second of the power up cycle, the FL4000H will enable the DIP Switch Override, enabling the 8-position Dip Switch settings to take effect. The DIP Switch Override bit will be set to zero after approximately 1 second, at which time this input can be released from ground.

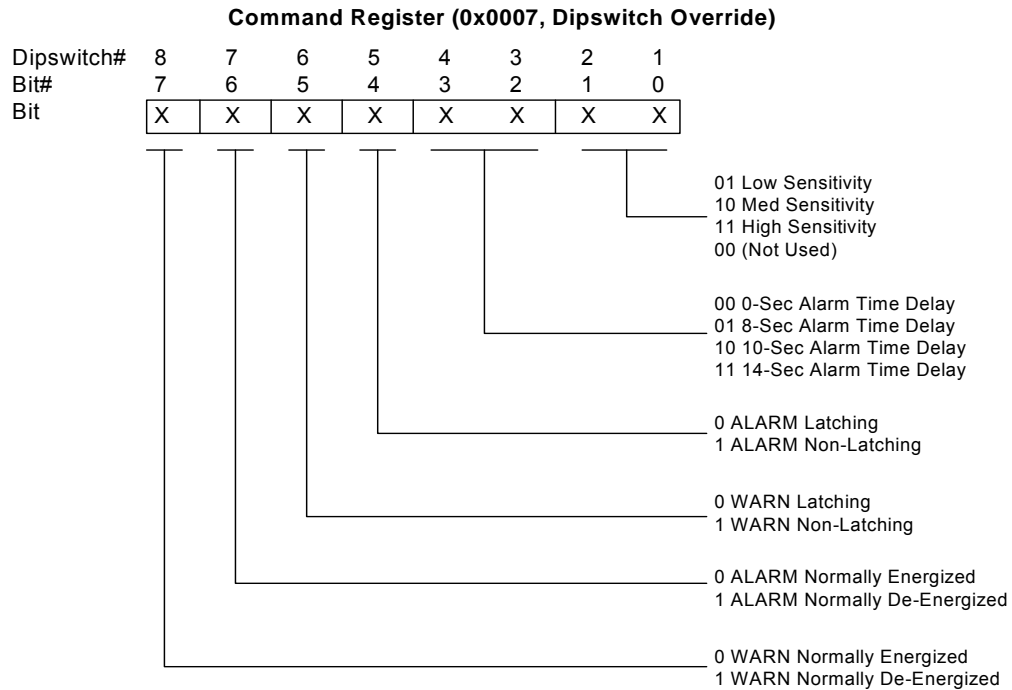


Figure 24: Command Register

4.10.8 Options (0x0008)

A read returns the status of the settings for the Detector Sensitivity, Relay Delay, Relay Latching/Non-Latching and Relay Energized/De-Energized features either from the Options dipswitch or the FLASH depending on the setting of the dipswitch override bit listed above. A write command changes the settings for the FLASH only when the dipswitch override bit is enabled. The bits, 0-7 in the register, map directly to the dipswitches 1-8 as shown in Table 21.

NOTE: If one writes to register 0x005B, the delay value will be changed, but bits 2 and 3 in register 8 will not be affected. If register 0x0008 is then written to, it will reset register 0x005B if the bits are different from their previous values. If you intend to set the delay through register 0x005B, bits 2 and 3 of register 0x0008 should always be written as 11.

EXCEPTION: If an attempt to change the FLASH Options is made while the dipswitch override bit is disabled, then the unit shall return an Exception Code 03 (Illegal Data Value).

4.10.9 COM1 Address (0x0009)

A read command returns the current address for Com1. A write command changes the address to the requested value. Valid addresses are 1-247 decimal. **Factory default is 1.**

NOTE: If the address is not in range an Illegal Data Value (03) is returned. By grounding the RESET input during the first 1 second of the power up cycle, the FL4000H Address will default to 1. The address will be set to a default of 1 when the red and green LED's flash alternately after approximately 1 second, at which time the RESET input can be released from ground.

4.10.10 COM1 Baud Rate (0x000B)

A read command returns the current baud rate for COM1 channel. A write command changes the baud rate to the requested values. Valid settings are shown in Table 33. **Factory default is 19,200 baud.**

Table 33: Com1 Baud Rate

| Baud Rate | Value | Access |
|-----------|-------|--------------|
| 2,400 | 0 | Read / Write |
| 4,800 | 1 | Read / Write |
| 9,600 | 2 | Read / Write |
| 19,200 | 3 | Read / Write |
| 38,400 | 4 | Read / Write |

NOTE: If the baud rate is not in range, an Illegal Data Value (03) is returned. By grounding the RESET input during the first 1 second of the power up cycle, the FL4000H Baud Rate will default to 19.2K. The baud rate will be set to a default of 19.2K when the red and green LED's flash alternately after approximately 1 second, at which time the RESET input can be released from ground.

4.10.11 COM1 Data Format (0x000C)

A read command returns the current data format for COM1 channel. Write command changes the data format to the requested values. Valid settings are shown in Table 34. Default format is 8-N-1.

Table 34: Selectable Data Formats

| Format | Parity | Stop | Data Bits | Value | Access |
|--------|--------|------|-----------|-------|--------------|
| 8-N-1 | None | 1 | 8 | 0 | Read / Write |
| 8-E-1 | Even | 1 | 8 | 1 | Read / Write |
| 8-O-1 | Odd | 1 | 8 | 2 | Read / Write |
| 8-N-2 | None | 2 | 8 | 3 | Read / Write |

NOTE: If the data format is not in range, an Illegal Data Value (03) is returned. By grounding the RESET input during the first 1 second of the power up cycle, the FL4000H Data Format will default to 8-N-1. The Data Format will be set to a default of 8-N-1 when the red and green LED's flash alternately after approximately 1 second, at which time the RESET input can be released from ground.

4.10.12 COPM Counts Sensor 1 (0x000D)

A read indicates the number of COPM Faults that have occurred for sensor 1 in the FL4000H. Please refer to Section 2.4.2 for more information on COPM and Section 6.0 for troubleshooting tips.

4.10.13 COPM Counts Sensor 2 (0x000E)

A read indicates the number of COPM Faults that have occurred for sensor 2 in the FL4000H. Please refer to Section 2.4.2 for more information on COPM and Section 6.0 for troubleshooting tips.

4.10.14 COPM Counts Sensor 3 (0x000F)

A read indicates the number of COPM Faults that have occurred for sensor 3 in the FL4000H. Please refer to Section 2.4.2 for more information on COPM and Section 6.0 for troubleshooting tips.

4.10.15 COPM Counts Sensor 4 (0x0010)

A read indicates the number of COPM Faults that have occurred for sensor 4 in the FL4000H. Please refer to Section 2.4.2 for more information on COPM and Section 6.0 for troubleshooting tips.

4.10.16 Remote Reset (0x0011)

Writing a 1 to the register activates the Remote Reset function, which resets the Alarm and Warn Relays. The function is active momentarily and will reset automatically after being used.

4.10.17 Remote Alarm Test (0x0012)

Writing a 1 to the register activates the Remote Alarm Test function, which activates the Warn and Alarm Relays. In addition, the function also activates the corresponding LED sequence and analog output. Upon completion of the test, a zero should be written to the register to conclude the Alarm Test. If the relays are configured in a latching configuration, refer to Section 4.10.16 to reset the relays and the alarm condition.

4.10.18 Clear COPM Faults (0x0013)

Writing a 1 to the register activates the Clear COPM Faults function that resets all of the detector fault counters.

4.10.19 Sensor Temperature Output (0x0014)

Reading this register retrieves the sensor temperature in degrees Celsius. The range is –128 to +128.

4.10.20 HART Enable/Disable (0x001D)

This command enables or disables the HART. A '0' is to disable and a '1' is to enable.

4.10.21 Total Receive Errors – COM1 or COM2 (0x0020)

A read indicates the total Modbus COM1 or COM2 channel receive errors in the FL4000H. The maximum count is 65535, after which the counter resets to zero and begins counting anew. The total errors are an accumulation of all communication errors.

4.10.22 Data Errors – COM1 and COM2 (0x0021)

A read indicates the number of illegal data write errors on user Modbus. These are errors where the write value is out of range. The maximum count is 65535, after which the counter resets to zero and begins counting anew.

4.10.23 COM1 and COM2 Function Code Errors (0x0022)

A read indicates the total Modbus COM1 & COM2 function code errors that occurred in the slave device. The maximum count is 65535, after which the counter resets to zero and begins counting anew.

4.10.24 Starting Register Address Errors (0x0023)

A read indicates the number of starting register address errors. The maximum count is 65535, after which the counter resets to zero and begins counting anew.

4.10.25 Total Receive Errors – COM1 only (0x0024)

A read indicates the total number of Modbus COM1 receive errors in the FL4000H. The maximum count is 65535, after which the counter resets to zero and begins counting anew.

4.10.26 CRC Errors Low – COM1 and COM2 (0x0025)

A read indicates the total number of COM1 or COM2 CRC low byte errors in the FL4000H. The maximum count is 65535, after which the counter resets to zero and begins counting anew.

4.10.27 CRC Errors Hi – COM1 and COM2 (0x0026)

A read indicates the number of COM1 and COM2 CRC Hi byte errors that occurred in the FL4000H. The maximum count is 65535, after which the counter resets to zero and begins counting anew.

4.10.28 Total Overrun Errors – COM1 only (0x0027)

A read indicates the number of COM1 Overrun Errors that occurred in the FL4000H. The maximum count is 65535, after which the counter resets to zero and begins counting anew.

NOTE: An overrun error occurs when a subsequent received data byte overwrites an earlier unprocessed data byte. As a result, one of the received data bytes will be corrupted.

4.10.29 Total Framing Errors – COM1 and COM2 (0x0029)

A read indicates the number of Comm 1 and Comm 2 Framing Errors that occurred in the FL4000H. The maximum count is 65535, after which the counter resets to zero and begins counting anew.

4.10.30 Clear Communication Errors (0x002D)

A read indicates the total number of Modbus communication errors. The maximum count is 65535, after which the counter resets to zero and begins counting anew. A write resets this value to 0. Only a write of value "0" is allowed for this register.

4.10.31 Enable/disable small HART current (0x002E)

Normally in HART mode the analog output current does not go below 3.5 mA and register 0x2E reads 0. If a value of 1 is written to the register 0x2E, the minimum HART current becomes 1.25 mA. This allows to distinguish several operating modes that have output current below 3.5 mA.

4.10.32 COM2 Address (0x002F)

A read returns the COM2 address of the FL4000H. A write changes the address to the requested number. The range of the address is from 1 to 247 (01 to F7 in Hex). After changing the address of the FL4000H, it will be necessary for the controlling or master device to similarly

change its query address in order to once again communicate with the FL4000H.

NOTE: By grounding the RESET input during the power-up cycle (approximately 10 seconds), the address of the FL4000H will default to 1.

4.10.33 COM2 Baud Rate (0x0030)

A read returns the COM2 baud rate of the FL4000H. A write changes the baud rate to the requested level. After changing the baud rate of the FL4000H, it will be necessary for the controlling or master device to similarly change its own baud rate in order to once again communicate with the FL4000H.

NOTE: By grounding the RESET input during the power-up cycle (approximately 10 seconds), the baud rate of the FL4000H will default to 19.2K. Valid settings are shown in Table 33

4.10.34 COM2 Data Format (0x0031)

A read returns the COM2 data format of the FL4000H. A write changes the data format to the requested format. After changing the data format of the FL4000H, it will be necessary for the controlling or master device to similarly change its own data format in order to once again communicate with the FL4000H.

NOTE: By grounding the RESET input during the power-up cycle (approximately 10 seconds), the data format of the FL4000H will default to 8-N-1. Valid settings are shown in Table 33.

4.10.35 Set/Read Real-time Clock Year, Month (0x0047)

This is used to read/write the real time clock. The high byte will be the year minus 2000. The low byte will be a value from 1 to 12.

4.10.36 Set/Read Real-time Clock Day, Hour (0x0048)

This is used to read/write the real time clock. The high byte will be the day of the month from 1 to 31. The low byte will be the hour from 0 to 23.

4.10.37 Set/Read Real-time Clock Minute, Second (0x0049)

This is used to read/write the real time clock. The high byte will be the minute from 0 to 59 and the low byte will be the seconds from 0 to 59.

NOTE: The registers when read, should be read in order: first 47, then 48, then 49. When written, they should be written in order: first 47, then 48, and finally 49.

4.10.38 Set/Reset TEST LAMP Test Mode (0x005A)

This is used to place the unit into Test Lamp test mode or return it to the normal mode. Writing a 1 to the register places the unit into test mode. Writing a 0 to the register places it back into normal mode. Refer to Section 3.6.6 Test Mode Terminal.

4.10.39 TEST LAMP Alarm Delay (0x005B)

Using the dipswitches, the alarm delay may be set to one of four pre-programmed settings (0, 8, 10, or 14 seconds). Register 0x5B is used to set the alarm delay to any desired value from 0 to 30 seconds. The dipswitch override flag must be set to 1.

NOTE: If the user writes to this register, it overrides the value set by bits 2 and 3 of register 8. Reading register 8 will simply return the last values in bits 2 and 3 that will not show the value written to this register. This behavior is intentional and is to provide backward compatibility with other General Monitors' flame detectors.

4.10.40 Power Cycle Flag (0x009A)

This reads whether the time of day clock has been reset after a power has been re-cycled to the unit. If the time has been reset, this flag will be = 0; otherwise the flag will = 1.

4.10.41 Event Index (0x00A0)

This is used to indicate which of the stored events the user would like to read. There are 4 event logs maintained by the FL4000H unit: Warning events, Alarm events, Fault events, and Maintenance events. Each of these event logs consist of 10 of their most recent occurrences. The user is able to read the times of each of these by setting this event index followed by a reading of the desired event log. The event index is a number from 0 to 9. Zero refers to the most recent event and 9 refers to the least recent event stored in the log. For example to read the most recent Warning event in the Warning event log, set this register to 0 and then read registers 0xA1 and 0xA2 (for the running time in seconds) or read registers 0xA3, 0xA4, and 0xA5 (for the clock time). There is also a warning counter which gives the total number of warnings received by the system (with a maximum of 65535).

4.10.42 Warning Running Time in Seconds, Hi Word (0x00A1)

This register reads the hi word of the running time in seconds when the warning event occurred. This time is in seconds since January 1, 2000. This register should be read before register 0xA2.

4.10.43 Warning Running Time in Seconds, Low Word (0x00A2)

This register reads the low word of the running time in seconds when the warning event occurred. This time is in seconds since January 1, 2000. This register should be read only after register 0xA1.

Table 35: Event Log Clock Time Format

| Item Number | Register | Description |
|-------------|----------|-------------------------------------|
| 1 | A3 | Hi Byte =Year, Low Byte = Month |
| 2 | A4 | Hi Byte = Day, Low Byte = Hour |
| 3 | A5 | Hi Byte = Minute, Low Byte = Second |

The values from the above table should be read in order: first item 1, then item 2, & then item 3.

4.10.44 Warning Clock Time: Year, Month (0x00A3)

These registers are described in Table 35 item number 1.

4.10.45 Warning Clock Time: Day, Hour (0x00A4)

These registers are described in Table 35 item number 2.

4.10.46 Warning Clock Time: Minute, Second (0x00A5)

These registers are described in Table 35 as item number 3.

4.10.47 Reserved (0x00A6)

This register returns the value 0.

4.10.48 Reserved (0x00A7)

This register returns the value 0.

4.10.49 Total Warning Event Counter (0x00A8)

This reads the total number of warning events have been stored in the unit.

4.10.50 Alarm Running Time in Seconds, Hi Word (0x00A9)

This register reads the hi word of the running time in seconds when the alarm event occurred. This time is in seconds since January 1, 2000. This register should be read before register 0xAA.

4.10.51 Alarm Running Time in Seconds, Low Word (0x00AA)

This register reads the low word of the running time in seconds when the alarm event occurred. This time is in seconds since January 1, 2000. This register should be read only after register 0xA9.

4.10.52 Alarm Clock Time: Year, Month (0x00AB)

These registers are described in Table 35 as item number 1.

4.10.53 Alarm Clock Time: Day, Hour (0x00AC)

These registers are described in Table 35 as item number 2.

4.10.54 Alarm Clock Time: Minute, Seconds (0x00AD)

These registers are described in Table 35 as item number 3.

4.10.55 Reserved (0x00AE)

This register returns the value 0.

4.10.56 Reserved (0x00AF)

This register returns the value 0.

4.10.57 Total Alarm Event Counter (0x00B0)

This reads the total number of alarm events have been stored in the unit.

4.10.58 Fault Running Time in Seconds, Hi Word (0x00B1)

This register reads the hi word of the running time in seconds when the fault event occurred. This time is in seconds since January 1, 2000. This register should be read before register 0xB2.

4.10.59 Fault Running Time in Seconds, Low Word (0x00B2)

This register reads the low word of the running time in seconds when the fault event occurred. This time is in seconds since January 1, 2000. This register should be read only after register 0xB1.

4.10.60 Fault Clock Time: Year, Month (0x00B3)

These registers are described in Table 35 as item number 1.

4.10.61 Fault Clock Time: Day, Hour (0x00B4)

These registers are described in Table 35 as item number 2.

4.10.62 Fault Clock Time: Minute, Seconds (0x00B5)

These registers are described in Table 35 as item number 3.

4.10.63 Fault Code (0x00B6)

This register is described in Table 32.

4.10.64 Reserved (0x00B7)

This register returns the value 0.

4.10.65 Total Fault Event Counter (0x00B8)

This reads the total number of fault events have been stored in the unit.

4.10.66 Maintenance Running Time in Seconds, Hi Word (0x00BA)

This register reads the hi word of the running time in seconds when the maintenance event occurred. This time is in seconds since January 1, 2000. This register should be read before register 0xBB.

4.10.67 Maintenance Running Time in Seconds, Low Word (0x00BB)

This register reads the low word of the running time in seconds when the maintenance event occurred. This time is in seconds since January 1, 2000. This register should only be read after register 0xBA.

4.10.68 Maintenance Clock Time: Year, Month (0x00BC)

These registers are described in Table 35 as item number 1.

4.10.69 Maintenance Clock Time: Day, Hour (0x00BD)

These registers are described in Table 35 as item number 2.

4.10.70 Maintenance Clock Time: Minute, Seconds (0x00BE)

These registers are described in Table 35 as item number 3.

4.10.71 Reserved (0x00BF)

This register returns the value 0.

4.10.72 Total Maintenance Event Counter (0x00C0)

This reads the total number of maintenance events have been stored in the unit.

4.10.73 Reset All Event Counters (0x00C1)

Writing to this register resets all event counters to zero.

5.0 Maintenance

5.1 General Maintenance

Once correctly installed, the unit requires very little maintenance other than regular sensitivity checks and cleaning of the window. General Monitors recommends that a schedule be established and followed. Do not remove the electronics from the housing. Doing so will void the equipment's warranty.

NOTE: The removal of particulate matter and any film buildup on the Sapphire Window and COPM Reflector is necessary to ensure proper sensitivity of the system. It is recommended that the window and reflector be cleaned at least every 30 days if the detector is located in a particularly dirty environment.

5.2 Cleaning the Sapphire Window

A clean, soft, lint-free cloth, tissue or cotton swab should be used to apply the cleaning solution. The window is not glass; it is made from sapphire. The cleaning solution should be General Monitors' P/N 10272-1 (Industrial Strength Windex® with Ammonia D).

Do not touch the window or COPM reflector with fingers.

1. Wet the window with the solution.
2. Rub with a dry, unsoiled cloth until the window is clean.
3. Completely dry the window.
4. Repeat steps 1, 2 and 3 for the reflector.



CAUTION: Dirty or partially blocked windows can significantly reduce the detectors field of view and detection distance. Do not use a commercial glass cleaner other than Industrial Strength Windex® with Ammonia D.

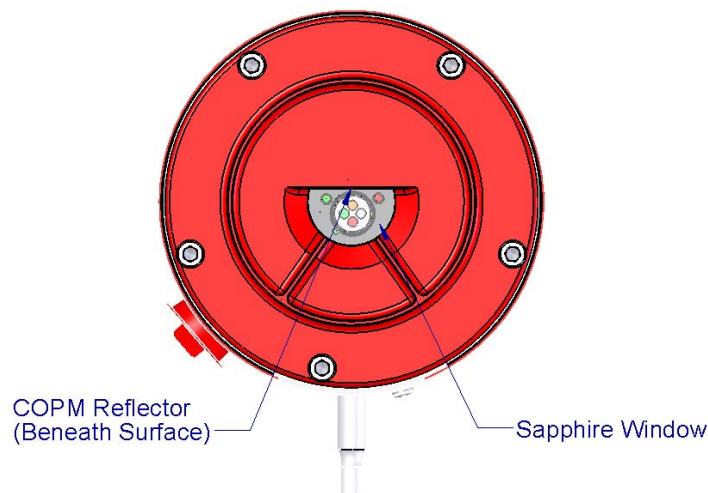


Figure 25: Optical Parts to Clean

5.3 Sensitivity Check

To verify that each detector is functioning correctly, a General Monitors' Test Lamp and/or the ALARM TEST function (Section 3.6.7) should be used. Refer to Section 8.5 for details on Test Lamps.

5.4 Storage

The FL4000H should be stored in a clean, dry area and within the temperature and humidity ranges quoted in Section 8.2.5, Environmental Specifications.

6.0 Troubleshooting

6.1 Troubleshooting Chart

This section is intended to be a guide to correcting problems, which may arise in the field. General Monitors should be contacted for assistance if the corrective action listed does not eliminate the problem. Defective units should be returned to General Monitors for repair with a complete written description of the problem.

NOTE: If the equipment is under warranty, any repairs performed by persons other than General Monitors' authorized personnel may void the warranty. Please read the warranty statement carefully.



CAUTION: Be sure to inhibit or disconnect external alarm wiring before making any check that might send the unit into alarm.

Table 36: Troubleshooting Chart

| PROBLEM | POSSIBLE CAUSE | CORRECTIVE ACTION |
|--|---|--|
| Analog output signal = 0 mA and green LED in window is off | No DC power to the Unit | Be sure that the +24 VDC is applied with the correct polarity |
| Analog output signal = 0 mA (3.5 or 1.25 mA with HART) and green LED in window is rapidly blinking | Low voltage FAULT (voltage at unit is approximately +18.5 VDC) | Be sure that the unit is powered with at least +24 VDC under load |
| Analog output signal = 0 mA (3.5 or 1.25 mA with HART) and green LED in window is rapidly blinking, +24 VDC verified | Flash Checksum Not OK | Re-cycle power to the unit |
| Analog output signal = 0 mA (3.5 or 1.25 mA with HART) and green LED in window is rapidly blinking, +24 VDC verified OK, power was re-cycled | Flash Checksum Still Not OK | Call GM customer support |
| Analog output signal = 2 mA (3.5 mA with HART and small current disabled) and green LED in window is slowly blinking | COPM FAULT, dirty or obscured optical path (detector window) | Clean the window and reflector |
| Dipswitch settings do not match those observed in the operation of the detector | Device settings may have been changed by either HART or Modbus and no longer correspond to those on the dipswitch | Recycle power to the unit while connecting the test IO terminal to ground (refer to Section 3.9). After startup, adjust settings via dipswitch as described in Sec. 3.7 (Switch Selectable Options) |

6.2 Final Assembly

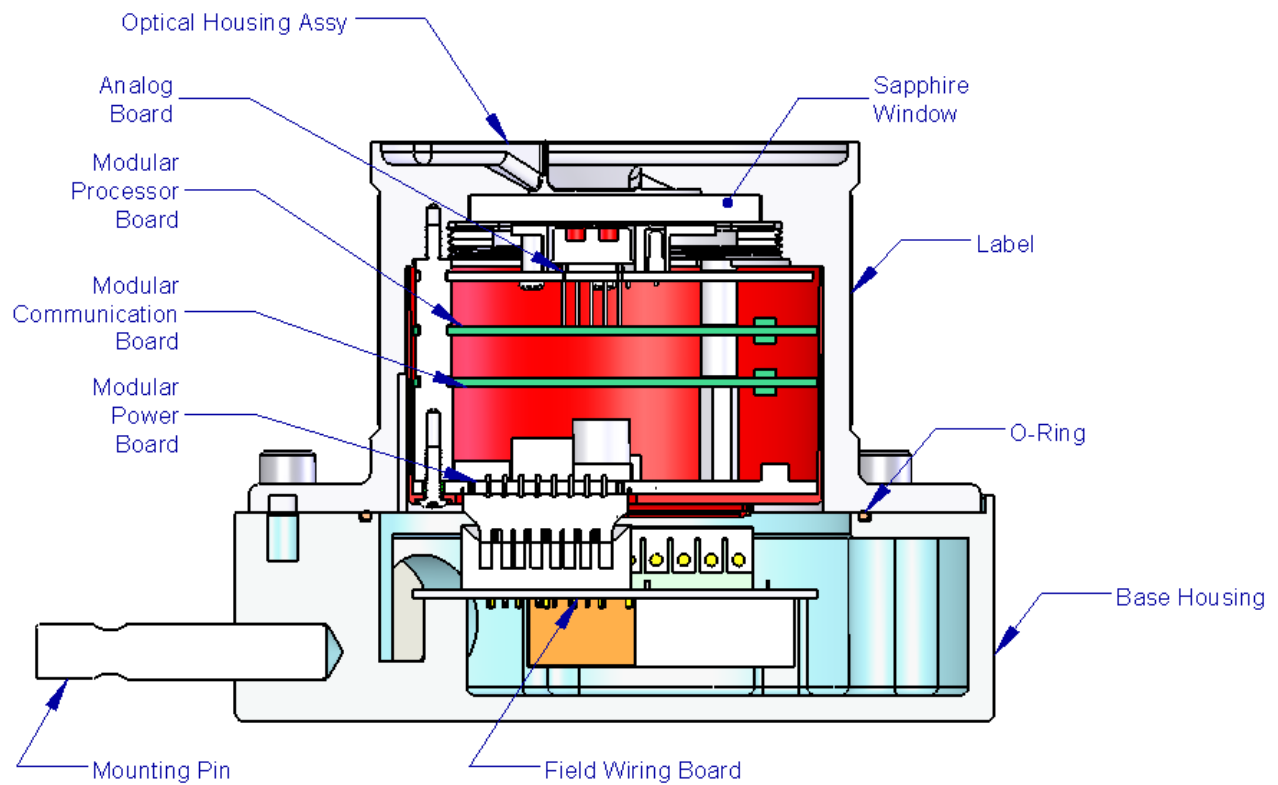


Figure 26: FL4000H Cross-Section View

7.0 Customer Support

Table 37: Locations

| Area | Phone/Email |
|--|--|
| UNITED STATES 26776 Simpatica Circle Lake Forest, CA 92630 | Phone: +1-949-581-4464. 800-446-4872 Email: info.gm@MSAsafety.com |
| | |
| | |
| | |
| IRELAND Ballybrit Business Park Galway Republic of Ireland, H91 H6P2 | Phone: +353-91-751175 |
| | |
| SINGAPORE No. 2 Kallang Pudding Rd. #09-16 Mactech Building Singapore 349307 | Phone: +65-6-748-3488 |
| | |
| MIDDLE EAST PO Box 54910 Dubai Airport Free Zone United Arab Emirates | Phone: +971-4294 3640 |

Additional locations can be found on our web site, www.MSAsafety.com

7.1 Other Sources of Help

Extensive documentation, white papers, and product literature for our complete line of safety products can be found at <http://www.MSAsafety.com/detection>

8.0 Appendix

8.1 Warranty

General Monitors warrants the FL4000H to be free from defects in workmanship or material under normal use and service within two (2) years from the date of shipment.

General Monitors will repair or replace without charge any equipment found to be defective during the warranty period. Full determination of the nature of, and responsibility for, defective or damaged equipment will be made by General Monitors' personnel.

Defective or damaged equipment must be shipped prepaid to General Monitors or the representative from which shipment was made. In all cases, this warranty is limited to the cost of the equipment supplied by General Monitors. The customer will assume all liability for the misuse of this equipment by its employees or other personnel.

All warranties are contingent upon proper use in the application for which the product was intended and do not cover products which have been modified or repaired without General Monitors' approval or which have been subjected to neglect, accident, improper installation or application, or on which the original identification marks have been removed or altered.

Except for the express warranty stated above, General Monitors disclaims all warranties with regard to the products sold, including all implied warranties of merchantability and fitness and the express warranties stated herein are in lieu of all obligations or liabilities on the part of General Monitors for damages including, but not limited to, consequential damages arising out of / or in connection with the use or performance of the product.

8.2 Specifications

8.2.1 System Specifications

| | |
|------------------------------|--|
| Typical Response Time: | ≤ 10 sec for heptane fires when detector is on axis to fire source; ≤ 30 sec when detector is at angles of $\pm 45^\circ$ |
| Field of View ⁹ : | 90° @ 210 ft (64 m), 100° @ 100 ft (31 m) |
| Sensitivity: | 60 ft (18 m), 120 ft (37 m), and 210 ft (64 m) for low, medium, and high sensitivities, respectively. Maximum distance for a 1 square foot (0.093 m ²) n-heptane fire to be reliably detected. For settings see 3.7 Switch Selectable Options. |

NOTE: Response Times and Field of View data were obtained from tests with a 1 square foot heptane fire. These are typical values and different results may occur depending on the variation of each fire.

⁹ *Maximum specified FOV* is the angle at which FL4000H can detect the flame at 50% of the maximum specified range. To comply with the directional dependence requirements for EN 54-10:2002, an angle of $\pm 35^\circ$ from 0° (0° = Orientation of detector in same axes as flame source) should not be exceeded, based on lab testing at a distance of approximately 5.9 ft (1.8 m).

8.2.2 Mechanical Specifications

Enclosure material: 316 Stainless Steel
 Color: Red
 Finish: Red Wrinkle Powder Coat

8.2.3 Dimensions

Height: 4.3" (109 mm)
 Diameter: 5.44" (138mm) Base - 3.50" (89 mm) Optical Housing
 Weight: 7.9 lb. (3.6 kg)

8.2.4 Electrical Specifications

Nominal supply voltage: 24 VDC (135 mA, 3.2W Max @ 24 VDC)
 Range: 20 to 36 VDC
 Maximum supply current: 160 mA (during COPM only)
 Maximum power consumption: 4.4W
 Spectral Range: 2 – 5 microns (IR)
 Maximum output signal load: 600 Ω @ 24 VDC

| | <u>Dual Modbus</u> | <u>HART</u> | <u>HART(small current)</u> |
|------------------------|---|-------------|----------------------------|
| Output signal range: | 0 to 20 mA | 3.5 – 20 mA | 1.25 – 20 mA |
| FAULT signal: | 0 to 0.2 mA | 3.5 mA | 1.25 mA |
| COPM fault signal: | 2.0 \pm 0.2 mA | 3.5 mA | 2.0 \pm 0.2 mA |
| Ready signal: | 4.3 \pm 0.2 mA | | |
| WARN signal: | 16.0 \pm 0.2 mA | | |
| ALARM signal: | 20.0 \pm 0.2 mA | | |
| Relay Contact Ratings: | 8 A @ 250 VAC, 8 A @ 30 VDC, Resistive MAX | | |
| RS-485 Output: | Modbus 128 units in series MAX (247 units with repeaters) | | |
| Baud Rate: | 2400, 4800, 9600, 19200, and 38400 Baud (See Terminal Connections 3-4 for Alarm Output Connections) | | |
| Status Indicator: | Two LED's indicate status, fault conditions | | |

8.2.5 Environmental Specifications

Operating temperature range: -40°F to 176°F (-40°C to 80°C)
 Storage temperature range: -40°F to 176°F (-40°C to 80°C)
 Humidity range: 0% to 95% RH, non-condensing

8.2.6 Maximum Cable Parameters

0-20 mA Output Signal

9,000 ft (2,750 m), maximum 50 Ω loop, with maximum 250 Ω input impedance of readout unit.

Remote Power Supply

3,000 ft (930 m), maximum 20 Ω loop and 24 VDC minimum (Section 3.6).

8.3 Regulatory Information

8.3.1 Approvals

| Approvals | Standard Configuration ¹⁰ | HART |
|-------------------------------------|--------------------------------------|------|
| ATEX | X | X |
| IECEX | X | X |
| CSA | X | X |
| FM | X | X |
| ULC | X | X |
| HART Communication Foundation (HCF) | | X |
| CPR (EN 54-10)* | X | X |
| INMETRO | X | X |
| BV Type Approval + MED | X | X |
| IEC 61508 to SIL 3, 2 or 1 | X | X |

*Listed as Class 1 for High and Medium Sensitivity and Class 2 for Low Sensitivity

8.3.2 Classification Area and Protection Methods

The FL4000H is certified as follows:

- Protection Method: Explosion proof, Flame proof, Dust-Ignition proof
- Temperature Class: T5 ($T_{amb} = -40^{\circ}\text{C}$ to $+80^{\circ}\text{C}$)
- Area Classifications:
 - Class I, Division 1, Groups B, C, and D
 - Class II, Division 1, Groups E, F, and G
 - Class III
 - Zone 1, Group IIC per ATEX / IECEX
 - Zone 21, Group IIIC per ATEX / IECEX
 - Ex d IIC T5 Gb, Ex tb IIIC T100°C Db
- EMC/EMI:
 - EMC Directive (2014/30/EU)
 - EN 50130-4, EN 61000-6-4
- Environmental Protection: Type 6P Enclosure, IP66/67

¹⁰ Dual Modbus with or without relays

8.4 Response to False Stimuli

The FL4000H detector is immune to a variety of false alarm sources. Below are representative samples of detector response in the presence of false stimuli.

Table 38: False Alarm Immunity at High Sensitivity

| False Alarm Source | Distance ft (m) | Modulated Response | Distance ft (m) | Unmodulated Response |
|--|----------------------------|-------------------------------|----------------------------|---------------------------------|
| Heater (1.5 kW) | 6 (1.8) | No alarm | 1 (0.3) | No alarm |
| 100 W incandescent lamp | 1 (0.3) | No alarm | 1 (0.3) | No alarm |
| Fluorescent lamp (2 40-W bulbs) | < 1 (0.3) | No alarm | < 1 (0.3) | No alarm |
| 500 W halogen lamp | 2 (0.6) | No alarm | < 1 (0.3) | No alarm |
| Sunlight, reflected | 6 (1.8) | No alarm | 6 (1.8) | No alarm |
| Sunlight, direct | – | No alarm | – | No alarm |
| Hot plate (200°C) | 3 (0.9) | No alarm | 1 (0.3) | No alarm |
| Arc welding (#6012, 1/8 in, 180 – 200 A, DC) | 5 (1.5) | No alarm | 11 (3.4) | No alarm |
| Arc welding (#6012, 1/8 in, 190 A, AC) | 5 (1.5) | No alarm | 9 (2.7) | No alarm |
| Arc welding (#7014, 1/8 in, 180 – 200 A, DC) | 15 (4.6) | No alarm | 12 (3.7) | No alarm |
| Arc welding (#7014, 1/8 in, 190 A, AC) | 15 (4.6) | No alarm | 15 (4.6) | No alarm |
| Arc welding (#7018, 1/8 in, 180 – 200 A, DC) | 15 (4.6) | No alarm | 13 (4.0) | No alarm |
| Arc welding (#7018, 1/8 in, 190 A, AC) | 12 (3.7) | No alarm | 10 (3.1) | No alarm |

Table 39 shows the response characteristics of the FL4000H in the presence of false alarm sources. The detector is set at a high sensitivity in this illustration.

Table 39: Flame Response in the Presence of False Alarm Sources (High Sensitivity)

| False Alarm Source | Min. Distance ft (m) | Fire Source | Max. Distance ft (m) |
|--|---------------------------------|-------------------------------|---------------------------------|
| Sunlight, reflected, unmodulated | 6 (1.8) | 1 x 1 ft ² heptane | 35 (10.7) |
| Sunlight, reflected, modulated | 30 (9.1) | 1 x 1 ft ² heptane | 30 (9.1) |
| Heater, unmodulated | 1 (0.3) | 1 x 1 ft ² heptane | 35 (10.7) |
| Heater, modulated | 12 (3.7) | 1 x 1 ft ² heptane | 35 (10.7) |
| Incandescent lamp, unmodulated | 2.5 (0.8) | 1 x 1 ft ² heptane | 35 (10.7) |
| Incandescent lamp, modulated | 2.5 (0.8) | 1 x 1 ft ² heptane | 35 (10.7) |
| Fluorescent lamp, unmodulated | 2.5 (0.8) | 1 x 1 ft ² heptane | 35 (10.7) |
| Fluorescent lamp, modulated | 2.5 (0.8) | 1 x 1 ft ² heptane | 80 (24.4) |
| Halogen lamp, unmodulated | 2 (0.6) | 1 x 1 ft ² heptane | 70 (21.3) |
| Halogen lamp, modulated | 4 (1.2) | 1 x 1 ft ² heptane | 35 (10.7) |
| Arc welding (#7014, 3/16 in, 190 A), unmodulated | 12 (3.7) | 1 x 1 ft ² heptane | 80 (24.4) |
| Arc welding (#7014, 3/16 in, 190 A), modulated | 15 (4.6) | 1 x 1 ft ² heptane | 80 (24.4) |

In general, the operator should try to avoid exposing the detector to false alarm sources. Many false stimuli such as welding or heaters emit high amounts of IR radiation, which tend to degrade the performance of the instrument.

8.5 Spare Parts and Accessories

8.5.1 Spare Parts

When ordering Spare Parts and/or Accessories, please contact the nearest General Monitors Representative or General Monitors directly and give the following information:

- Part Number
- Description
- Quantity

Table 40: List of Spare Parts

| # | Item Description | Part # |
|---|--------------------------|-------------|
| 1 | Window Cleaning Solution | 10272-1 |
| 2 | Bracket Assembly | 71370-1 |
| 3 | Instruction Manual | MANFL4000NH |
| 4 | Test Lamp | 71655-1 |
| 5 | Mounting Bracket | 71313-1 |
| 6 | Rain Guard Kit | 712006-1 |

8.5.2 Test Lamp

Due to the advanced discrimination of the FL4000H, the TL105 Test Lamp was developed. The Test Lamp is a battery operated, rechargeable, test source specifically designed to test General Monitors' IR Flame Detection Systems. It consists of a high-energy broadband radiation source that emits sufficient energy in the infrared spectra to activate the IR detector. To simulate a fire, the TL105 Test Lamp automatically flashes a signal that the FL4000H recognizes. The lamp must be set to rotary switch position "4" to be recognized by the FL4000H. See Appendix A for details.

Operating Instructions

The FL4000H has the ability to be put into a special test mode activated state by momentarily grounding the test mode pin on the unit or by issuing a Modbus write command to register 0x5A. The unit will respond by going into this test mode activated state and by blinking a unique flashing pattern with the green LED on for 0.9 seconds and off for 0.1 seconds. The analog current output will respond by outputting 1.5 mA (3.5 mA with HART and small HART current disabled). While the FL4000H is activated in test mode via the Test Lamp, the FL4000H will detect the TL105 Test Lamp as a flame source. The analog output and relays will respond as if a flame were present. The analog output will rise from 1.5 mA (3.5 mA with HART and small HART current disabled) to 16 mA (warning condition) and then to 20 mA (alarm). Relays will trip. In addition, an alternating red/green LED blink pattern is displayed. By momentarily grounding the test mode pin a second time, or by re-issuing a Modbus write command to register 0x5A, or after a 3-minute time out, the unit will return to normal operation in the Ready state.

NOTE: The TL105 Test Lamp triggers the FL4000H into test mode, causing an alarm condition.

It is important to begin a series of flame detector checks with a fully charged Test Lamp. Stand between 10 and 35 feet from the FL4000H that is to be tested and aim the Test Lamp directly into the detector window. Press the ON button and be sure the high intensity pulsing beam strikes the detector face squarely. Hold the Test Lamp as steady as possible.

To conserve charge, do not operate the Test Lamp longer than is necessary to test each channel.

When the battery level drops below the level required to maintain the proper intensity of the lamp, an internal low voltage circuit will shut the lamp off until the battery has been recharged. Please refer to the TL105 Test Lamp manual for complete operating instructions.

Recharging Instructions

NOTE: Charging must be carried out in a non-hazardous area. The charging receptacle is located inside the housing adjacent to the ON button. To gain access, it is necessary to unscrew the knurled plug from the body of the unit. The plug is secured to the ON button by a safety strap to keep it from being lost.

Insert the charging plug into the receptacle. Complete recharging takes 3.5 hours, minimum.

NOTE: Replace the plug after charging is complete.

It is recommended that the Test Lamp be kept on charge when not in use to prevent excessive battery discharge. The batteries may be charged an average of 500 times before the battery pack must be replaced.

8.5.3 Mounting Bracket

A mounting bracket is available to mount the FL4000H to a wall, pole, etc. The mounting bracket design allows for optical alignment adjustments when utilizing to a fixed installation. Please refer to Figure 16: Detector Mounting and Installation.

8.5.4 Rain Guard

A rain guard is available for the FL4000H. Install the rain guard per instruction sheet 712013.



Figure 27: Rain Guard Installation

9.0 Appendix A

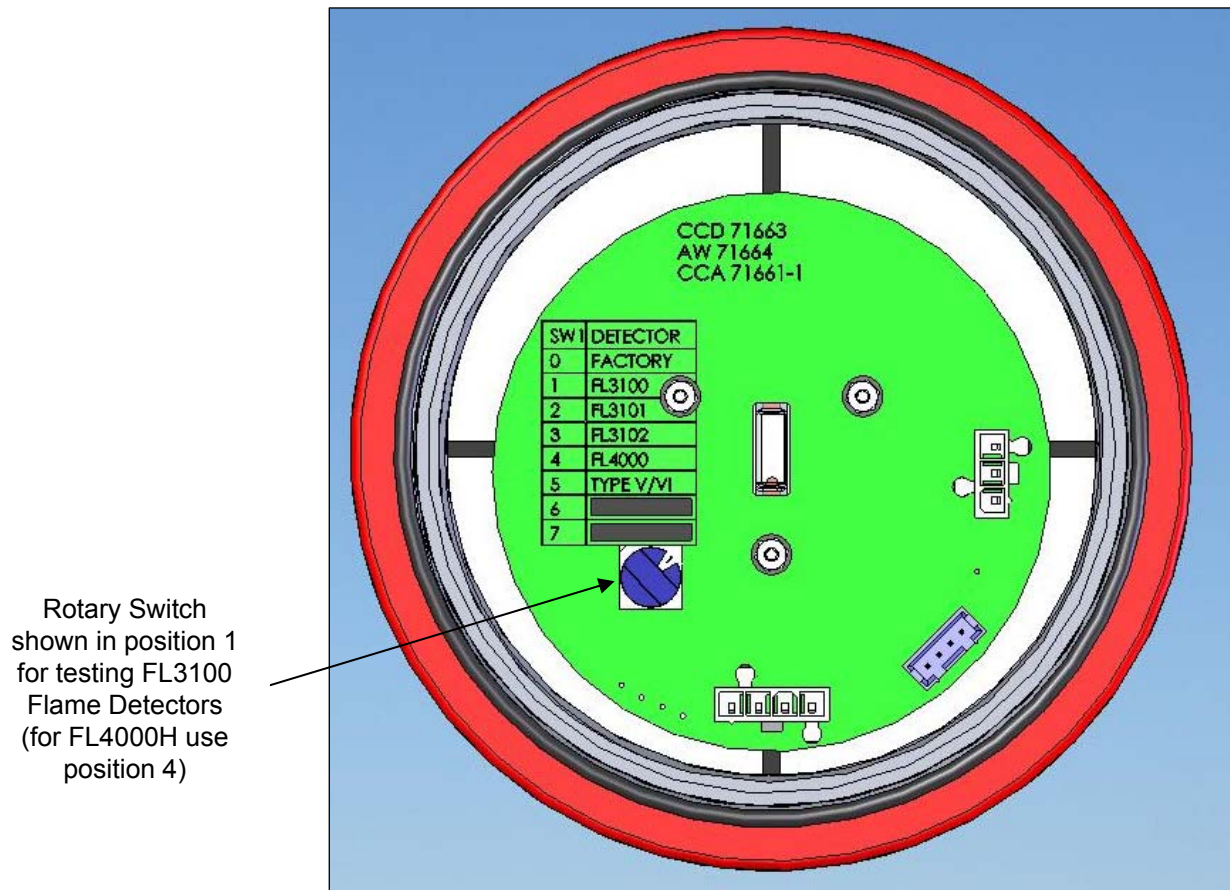





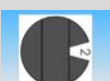









Figure 28: Functional Board Located Under TL105 Lamp Assembly

Table 41: Detector Test Mode Initiation or/Detector Alarm Trigger with Test Lamp

| Flame Detector to Test | Rotary Switch Setting | Maximum Distance to Detector (ft) | Results |
|------------------------|---|-----------------------------------|---|
| UV & UV/IR Type V & VI |  | 15 | UV & UV/IR Type V & VI triggers into alarm mode |
| FL3000 |  | 15 | FL3000 triggers into alarm mode |
| FL3001 |  | 35 | FL3001 triggers into alarm mode |
| FL3002 |  | 10 | FL3002 triggers into alarm mode |
| FL3100 |  | 20 | FL3100 triggers into alarm mode |
| FL3101 |  | 35 | FL3101 triggers into alarm mode |
| FL3102 |  | 10 | FL3102 triggers into alarm mode |
| FL3110 |  | 20 | FL3110 triggers into alarm mode |
| FL3111 |  | 35 | FL3111 triggers into alarm mode |
| FL3112 |  | 8 | FL3112 triggers into alarm mode |
| FL4000H |  | 35 (High Sensitivity) | FL4000H enters test mode |
| FL4000H |  | 18 (Medium Sensitivity) | FL4000H enters test mode |
| FL4000H |  | 8 (Low Sensitivity) | FL4000H enters test mode |



ADDENDUM

This product may contain hazardous and/or toxic substances.

EU Member states shall dispose according to WEEE regulations. For further WEEE disposal information please visit: www.MSAafety.com

All other countries or states: please dispose of in accordance with existing federal, state and local environmental control regulations.